

 
 
 
 
 
按钮开关系列 PUSH-BUTTON SWITCH SERIES

按钮开关系列主要技术特性 Specification of Push-button Switch Series






额定负荷 Rated Load	DC30V 1A	温度范围 Temperature	-40~+85℃
接触电阻 Contact Resistance	≤ 100mΩ	电器寿命 Life	≥ 3 万次
耐压 Withstand Voltage	AC500V/min	动作力 Operation Force	700 ± 100gf
绝缘电阻 Insulation Resistance	≥ 100MΩ		







8008-112A

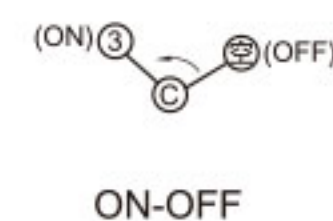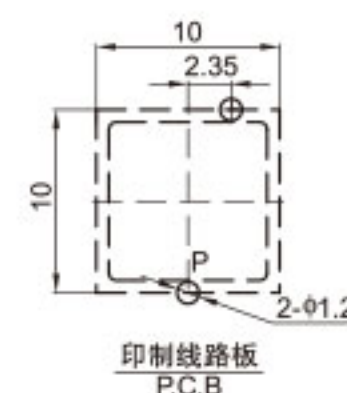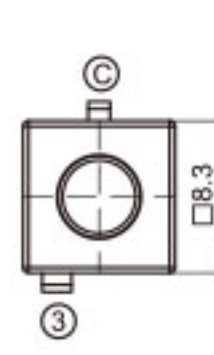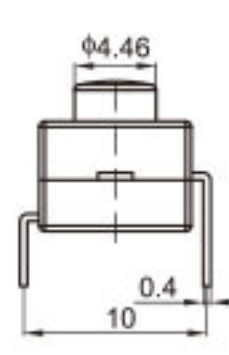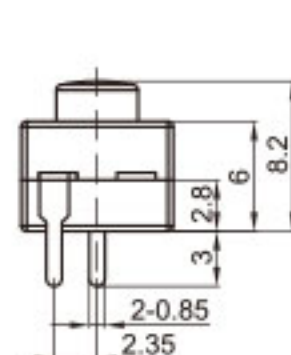






8008-112B

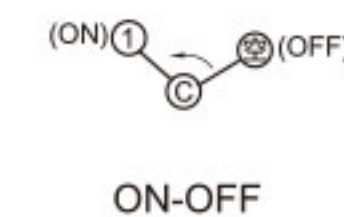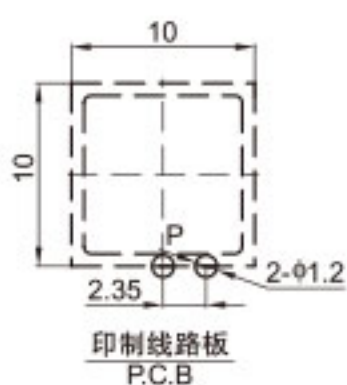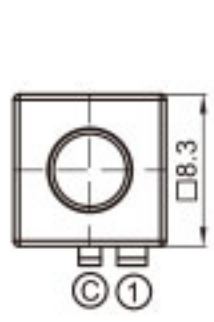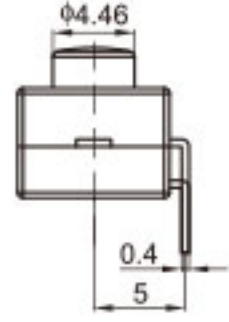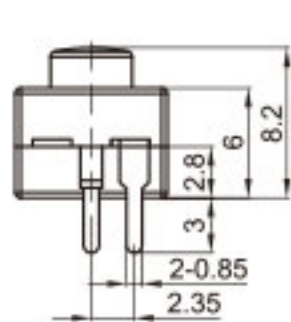     

8008-112C

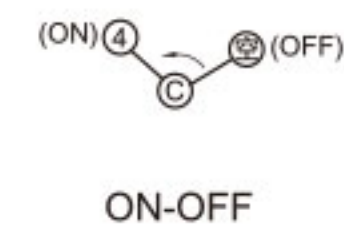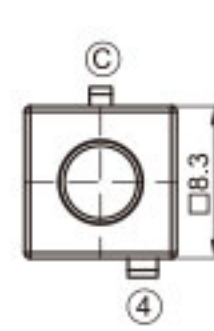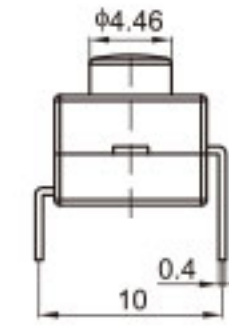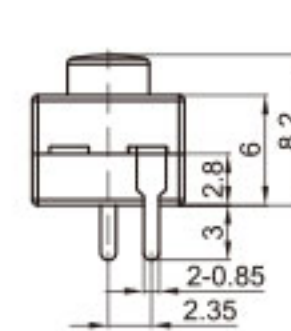    




8008-112D

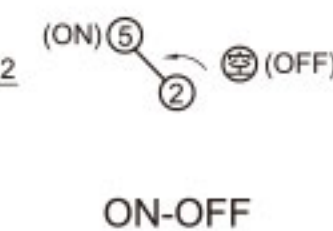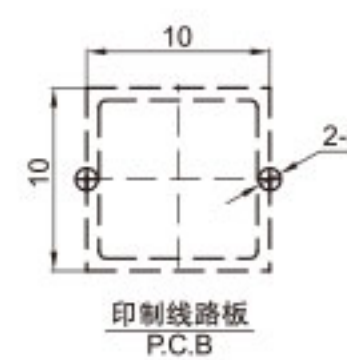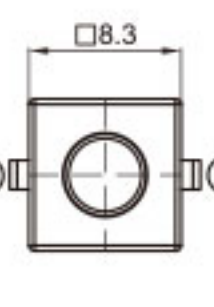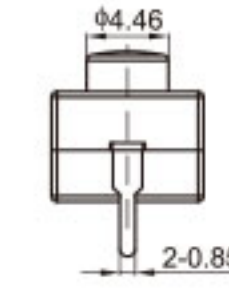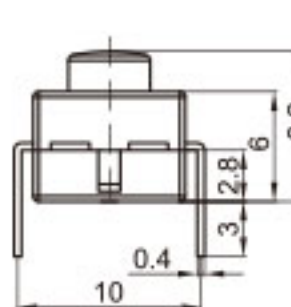     

084

按钮开关系列
PUSH-BUTTON SWITCH SERIES



 
 
 
按钮开关系列 PUSH-BUTTON SWITCH SERIES

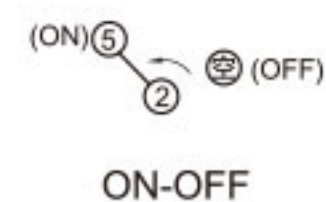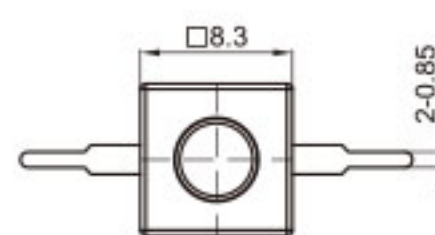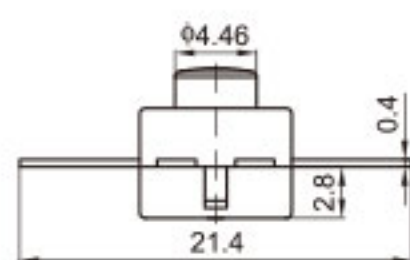





8008-112D 直脚

085

  
 
 
 
PUSH-BUTTON SWITCH SERIES
按钮开关系列

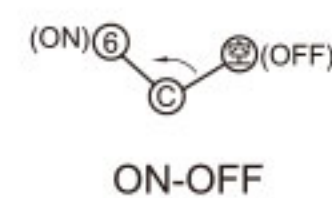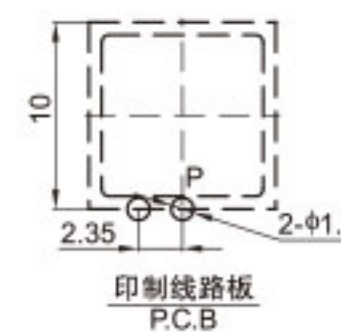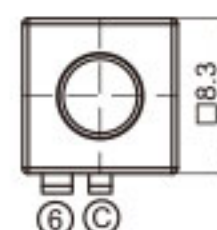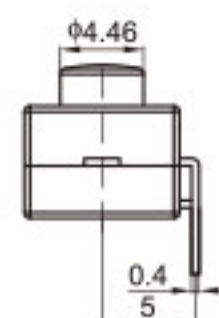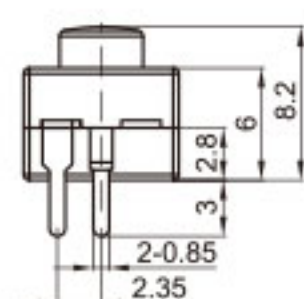




8008-112F

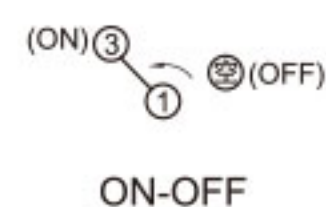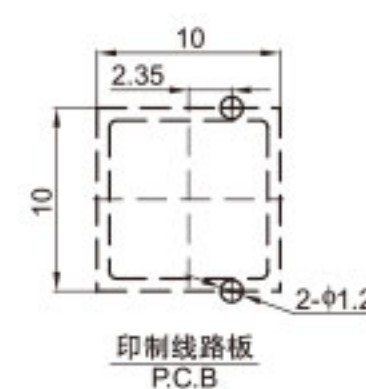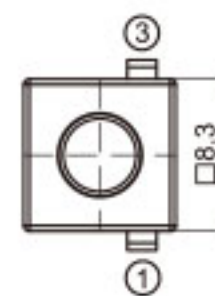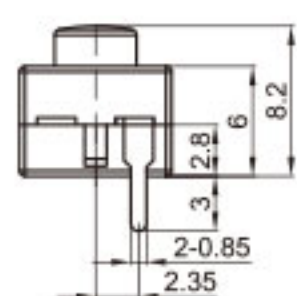    

8008-112W

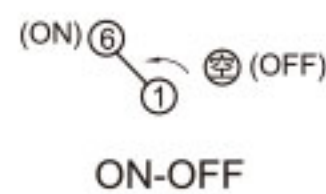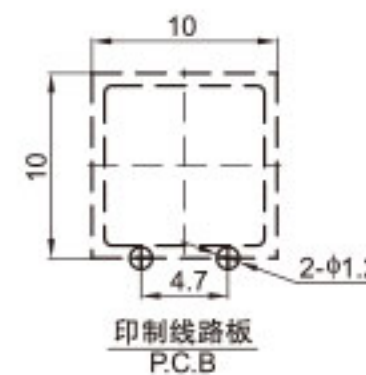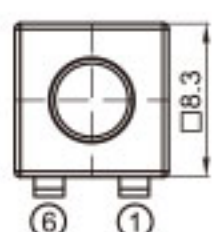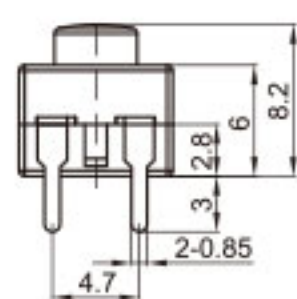    

8008-112YB

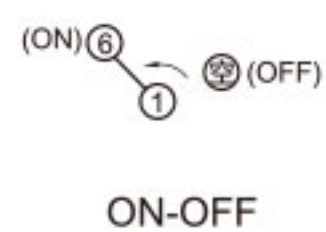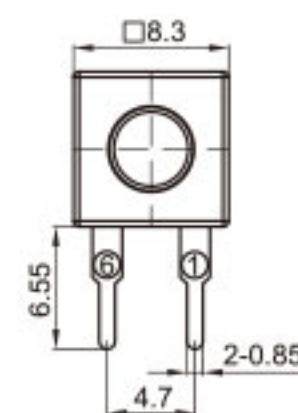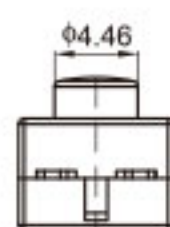   


8008-112WD




按钮开关系列 PUSH-BUTTON SWITCH SERIES



 
8008-213HA

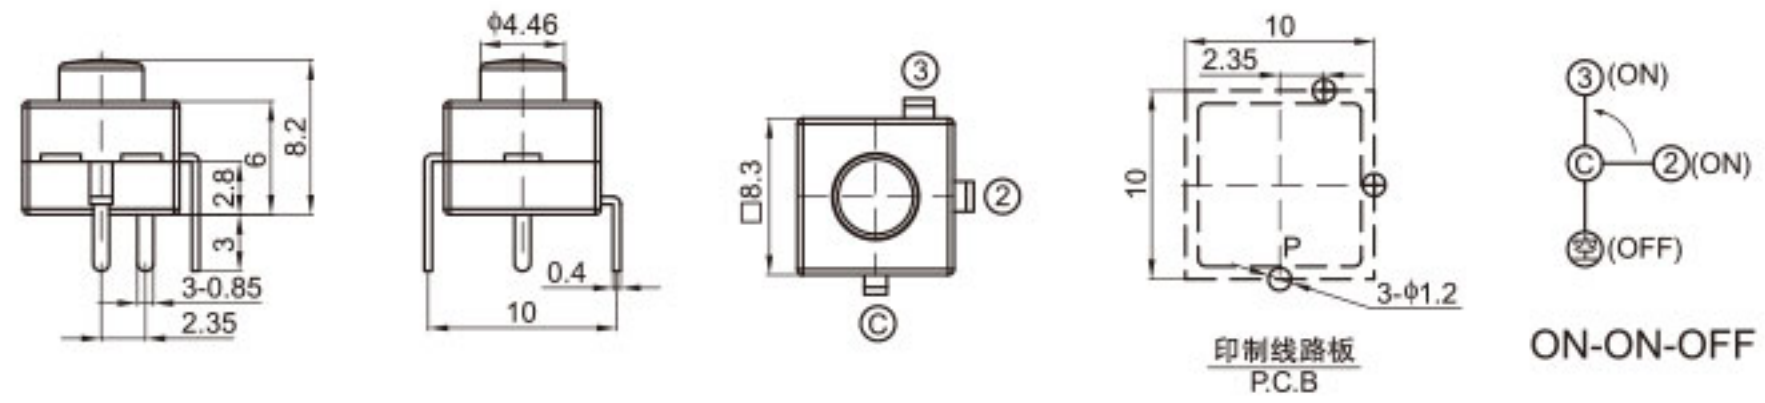


8008-213A

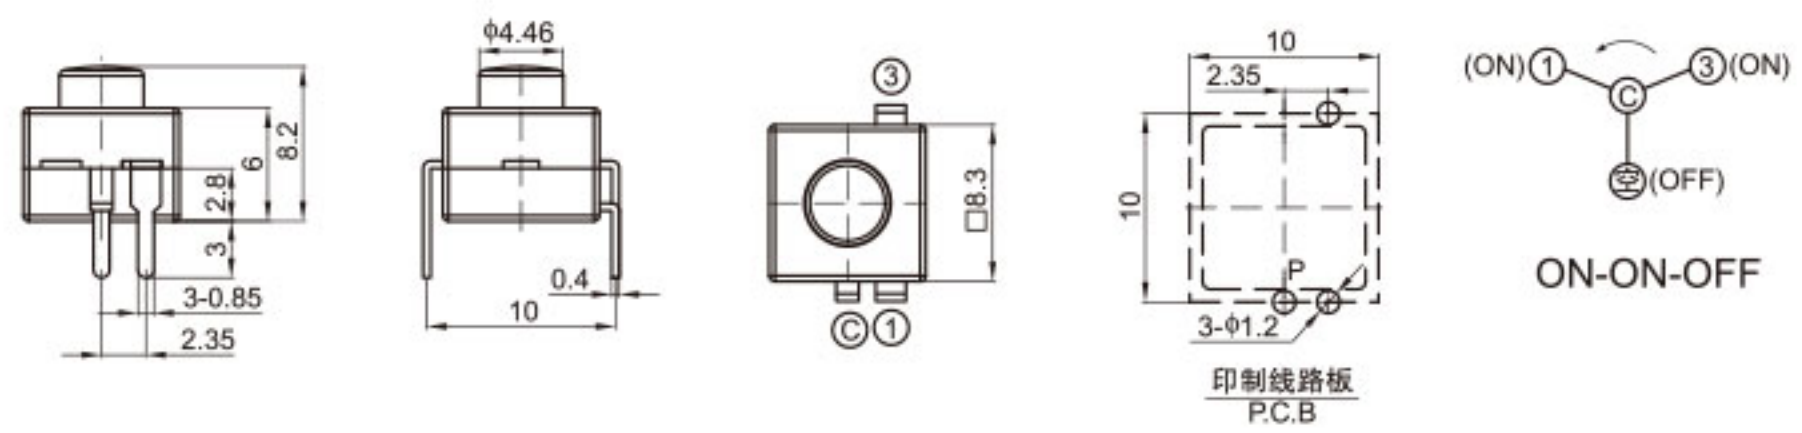 


8008-113C

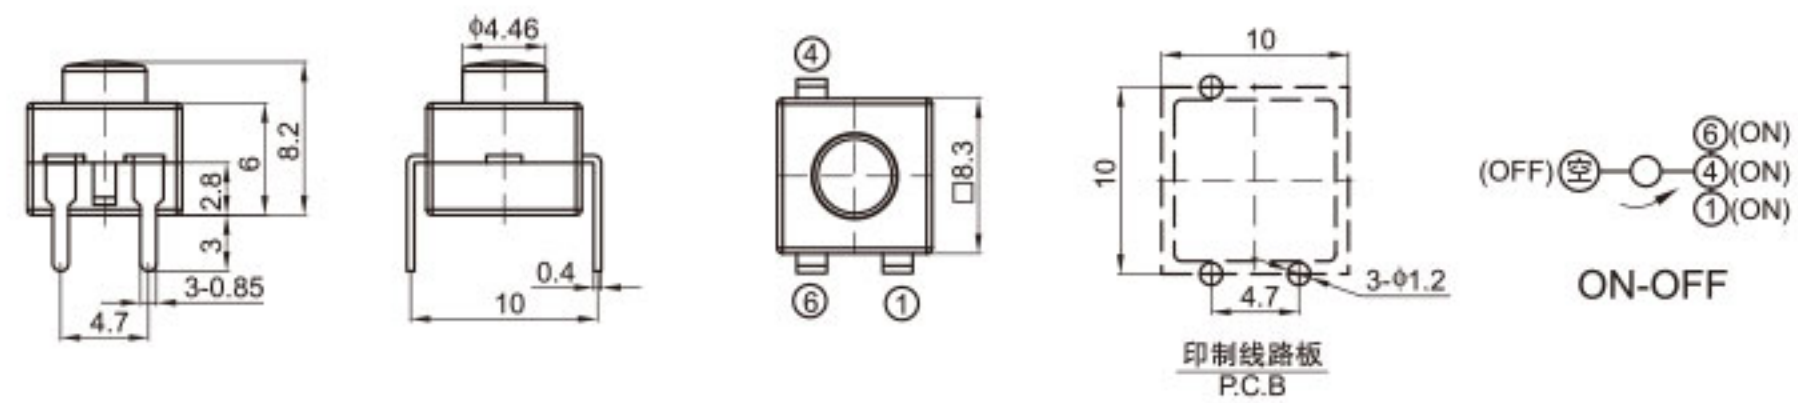 

8008-213BS
8008-113BS

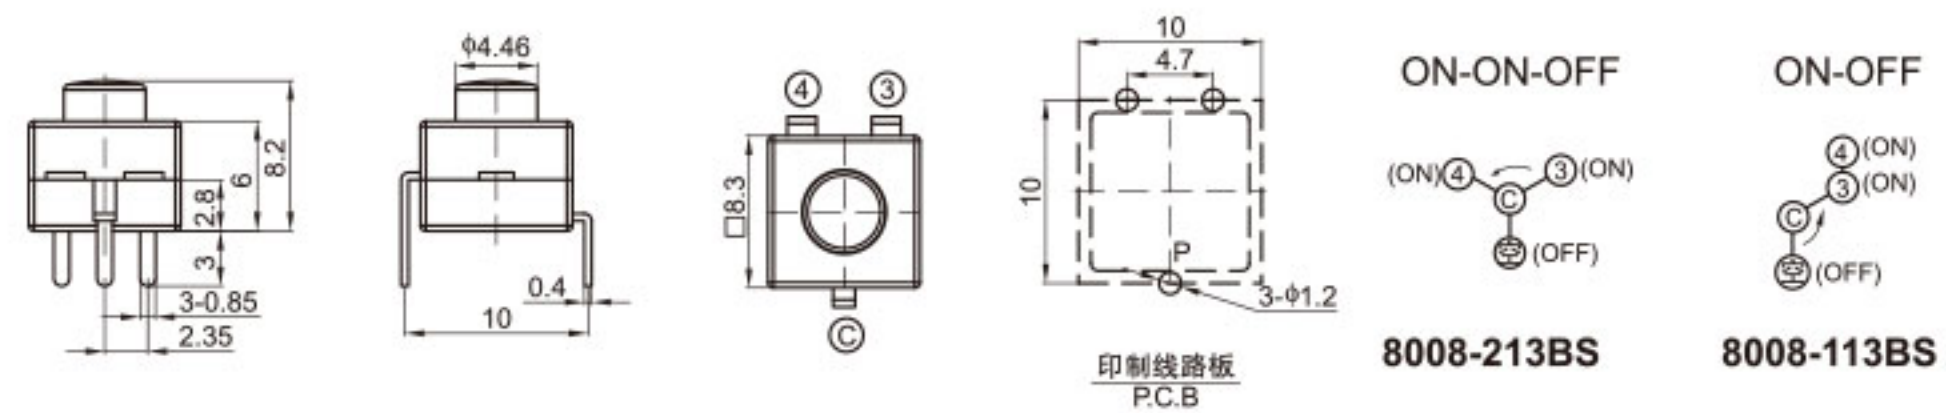 

8008-23BS
8008-223BS

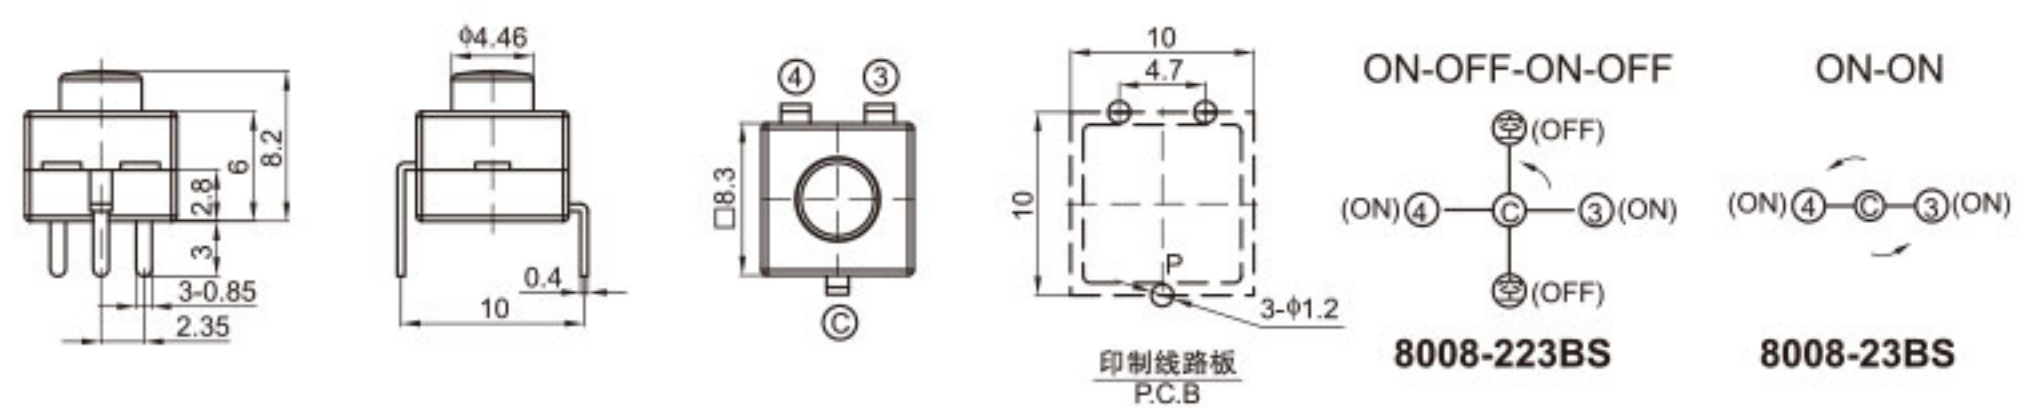 






086

按钮开关系列
PUSH-BUTTON SWITCH SERIES






按钮开关系列 PUSH-BUTTON SWITCH SERIES




 
 
 
 
 
8008-23YB
8008-213YB

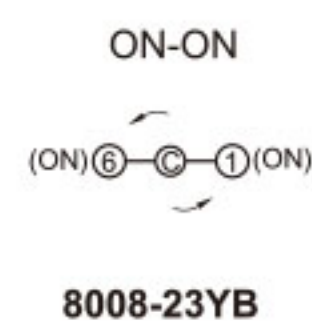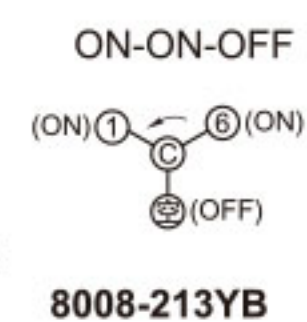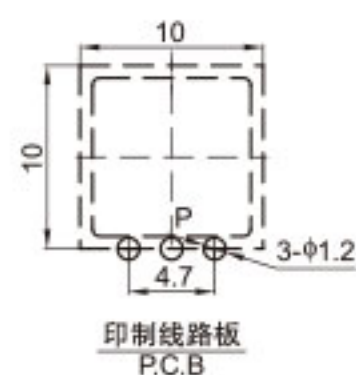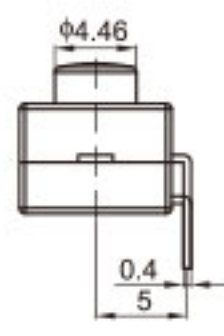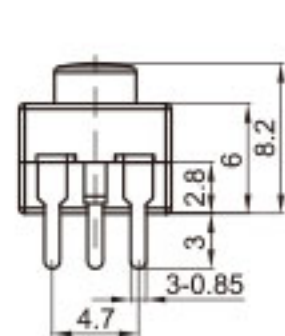






8008-223WD
8008-213WD

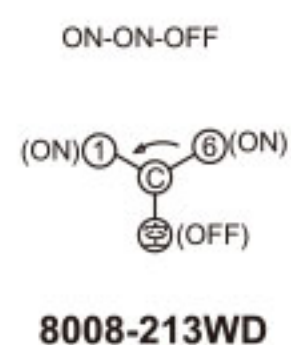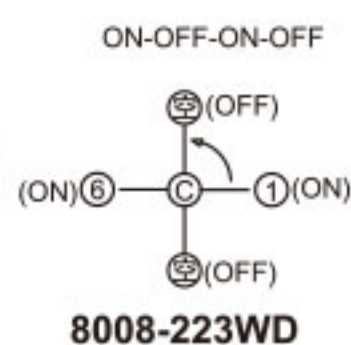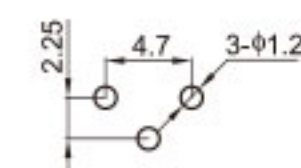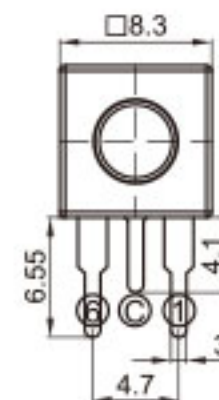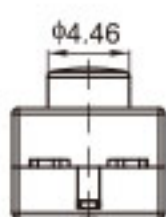     






8008-214C
8008-224C

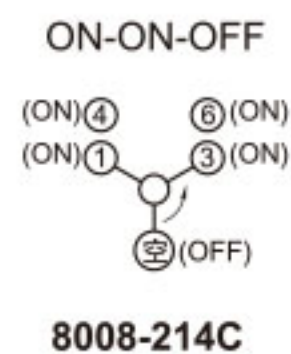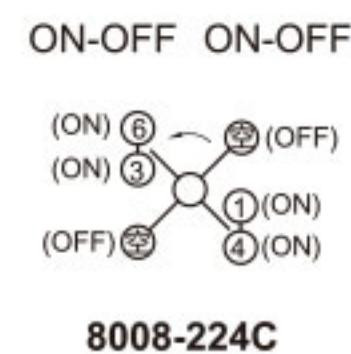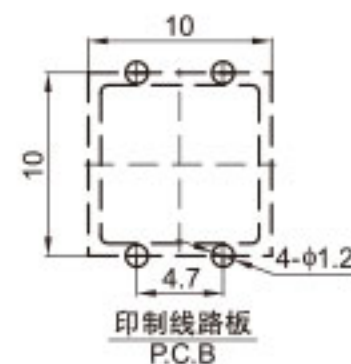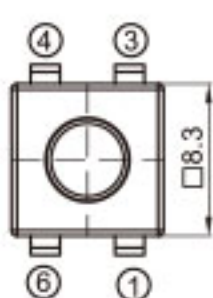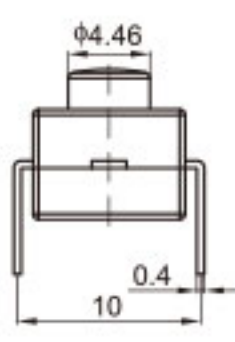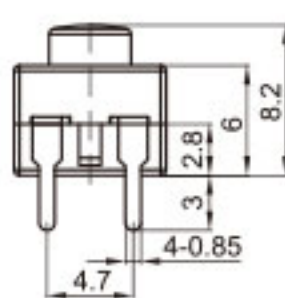      

8008-114C

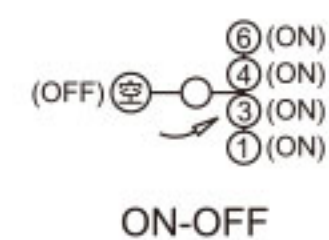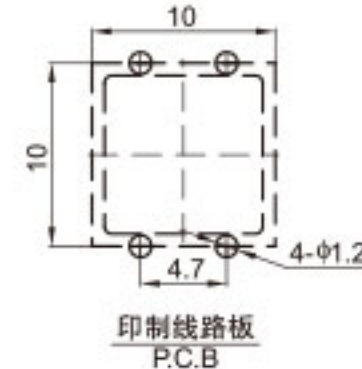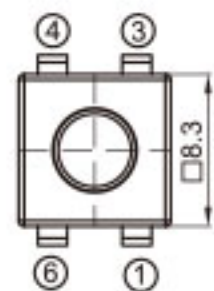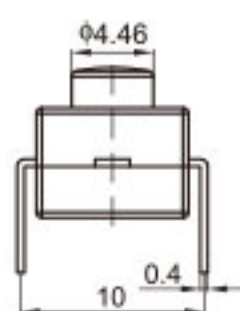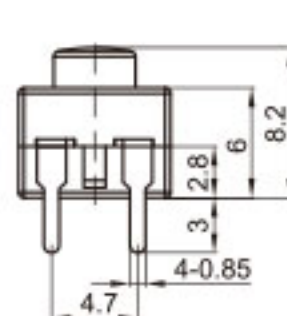     






8008-213F

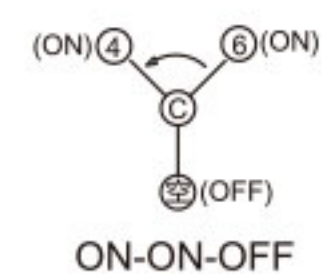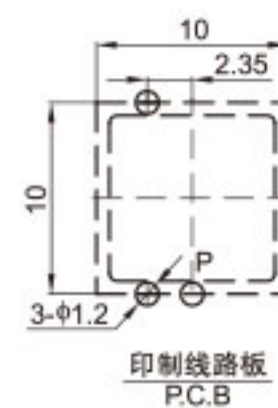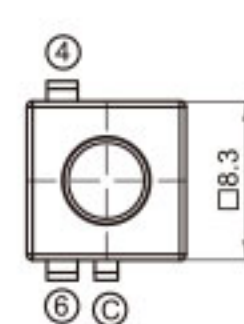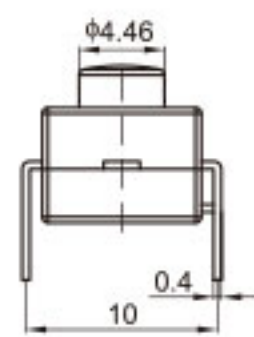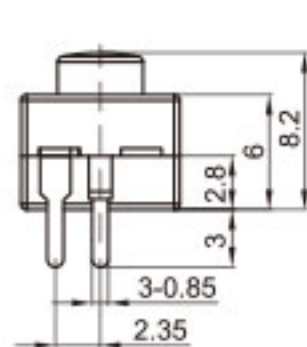     

按钮开关系列 PUSH-BUTTON SWITCH SERIES



 
 
 
 
 
8008-214A

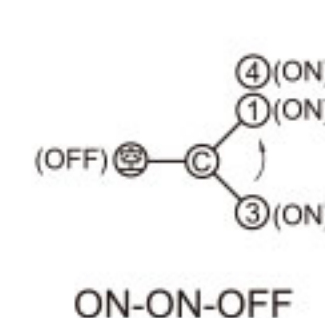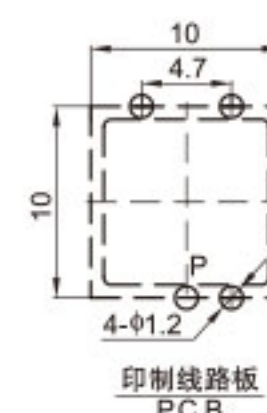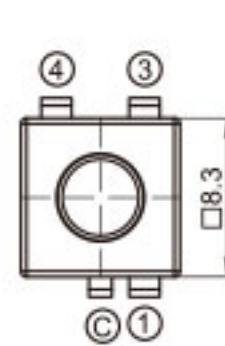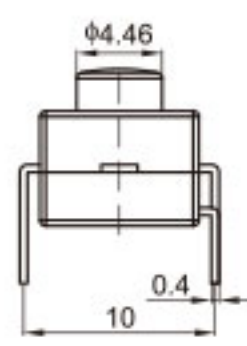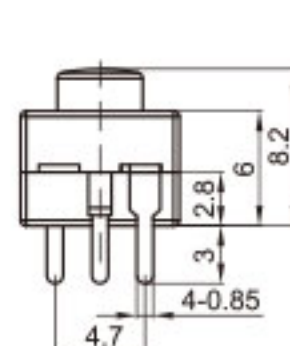

ON-ON-OFF



 
 
 
 
 
8008-214F

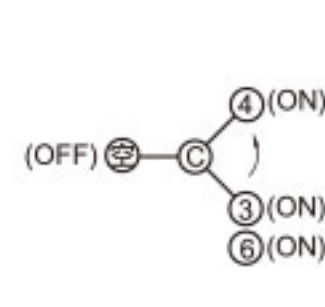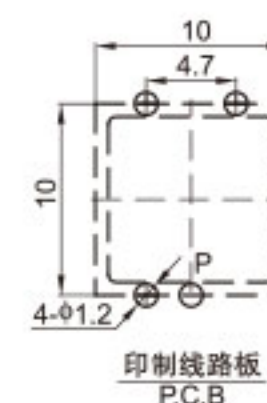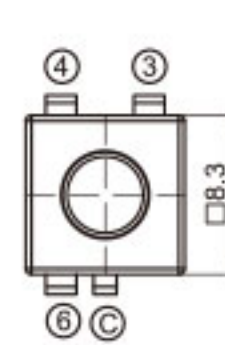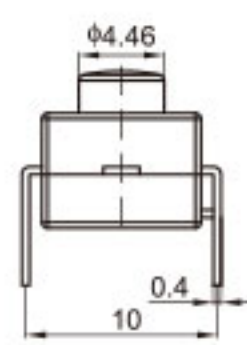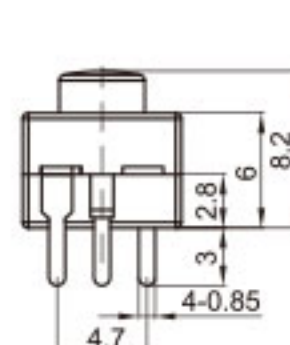

ON-ON-OFF



 
 
 
 
 
8008-215A

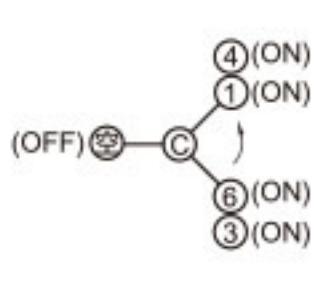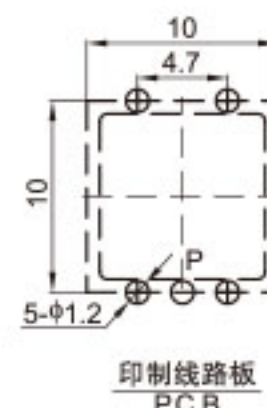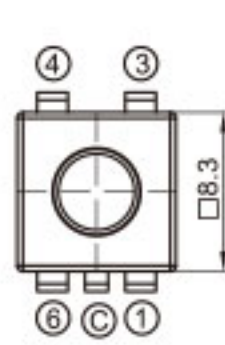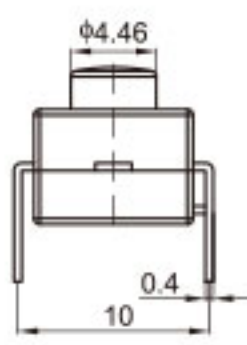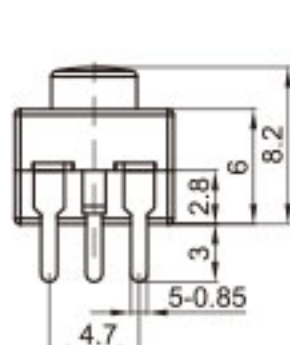

ON-ON-OFF



 
 
 
 
 
8008-314A

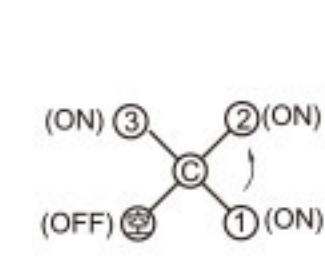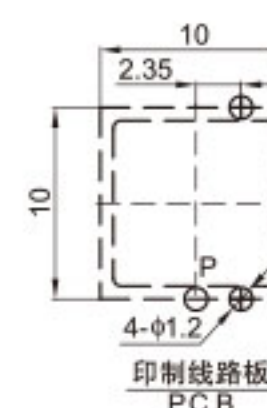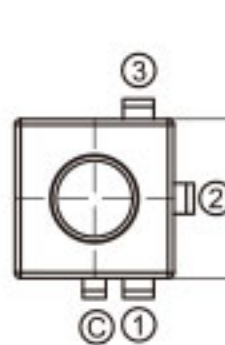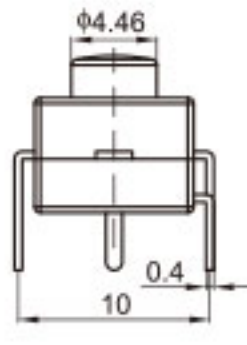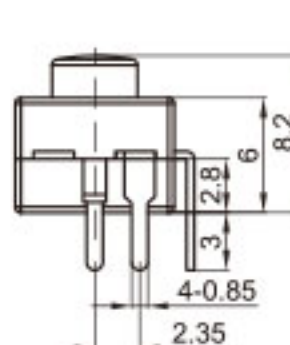

ON-ON-ON-OFF



     8008-314F

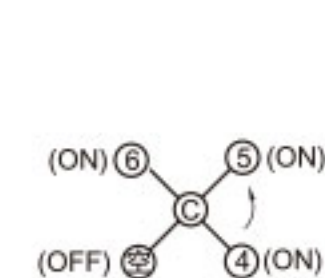
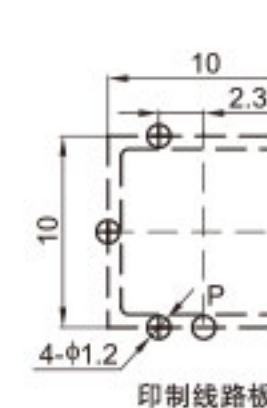
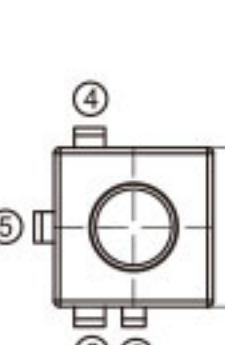
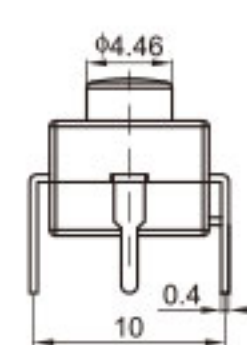
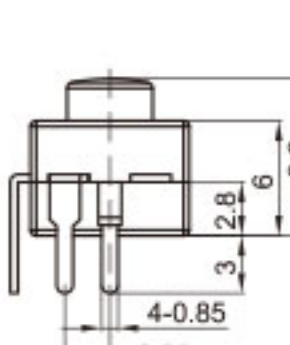


ON-ON-ON-OFF






按钮开关系列 PUSH-BUTTON SWITCH SERIES



 
 
 
 
 
8008-315A

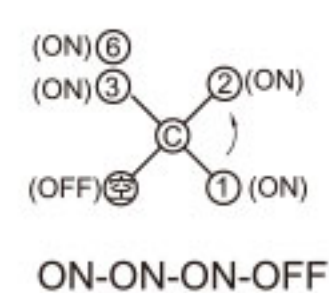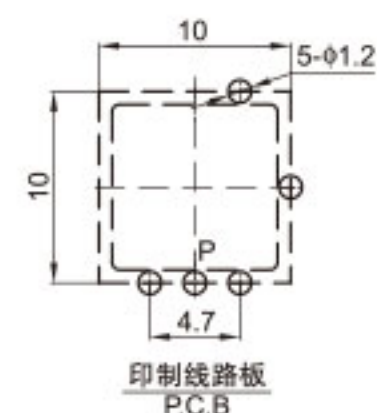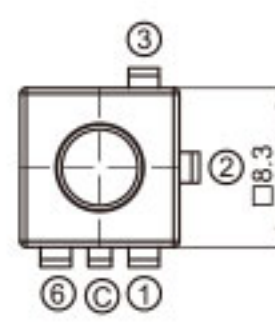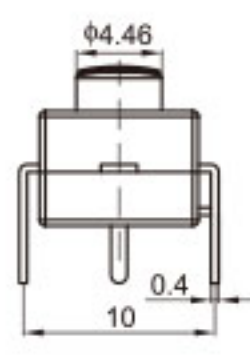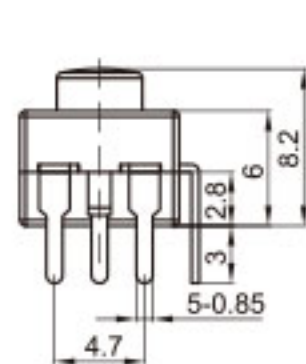






8008-315B

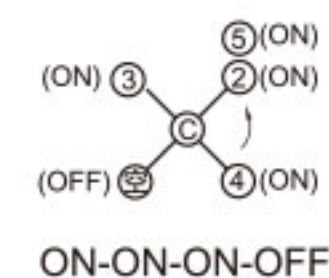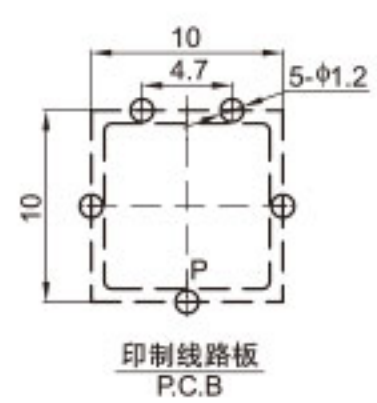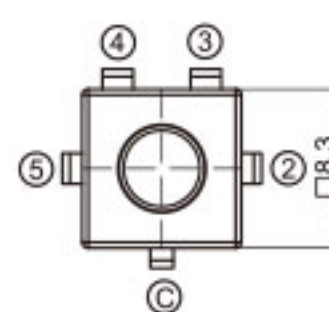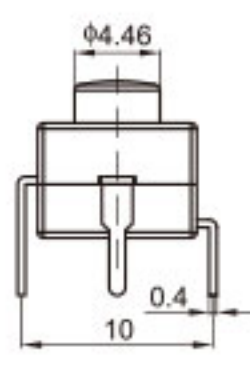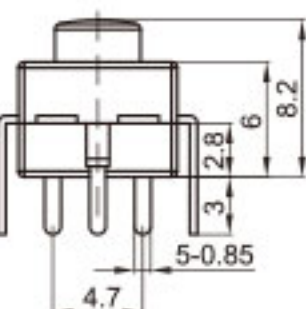     






8008-315V

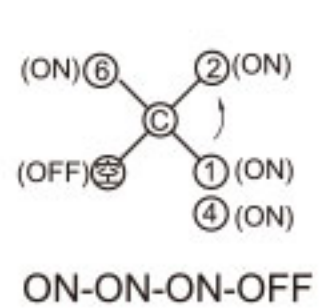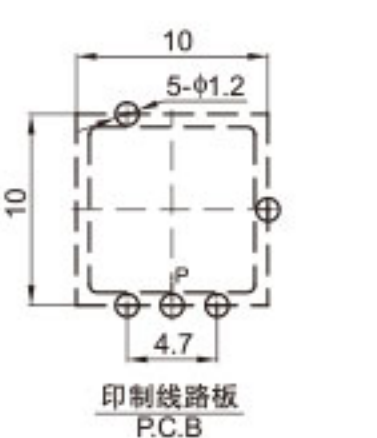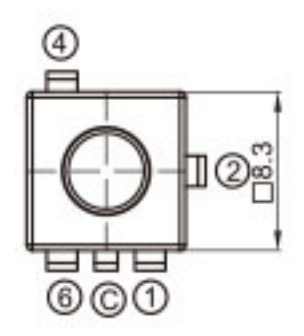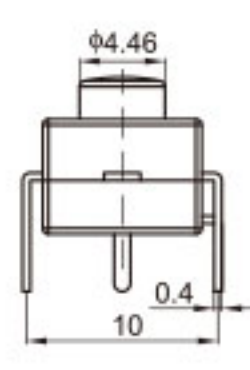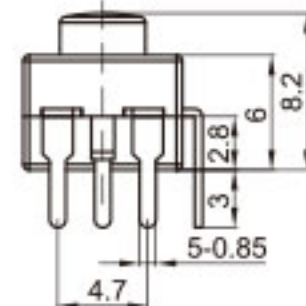     

8008-316A

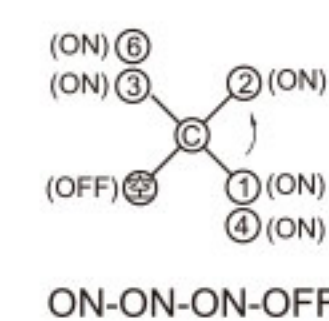 
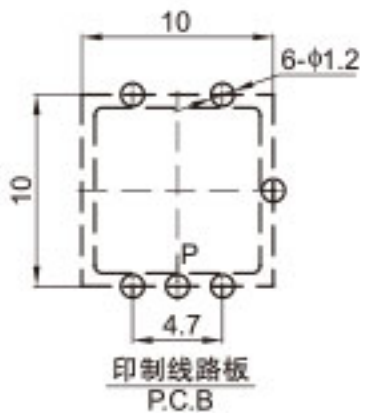 
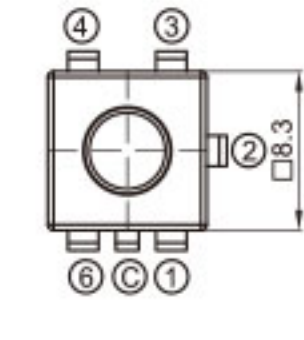 
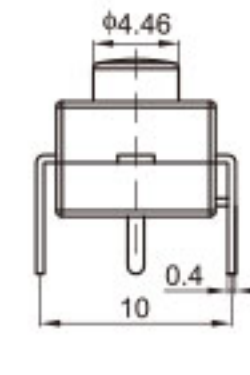 
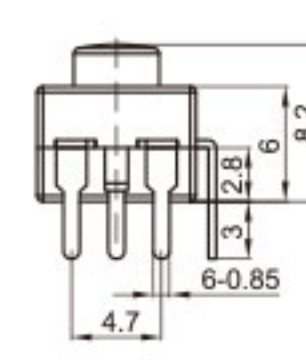 


8008-316B

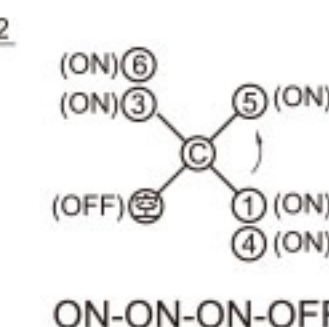 
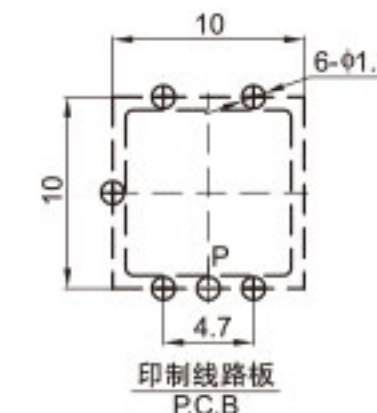 
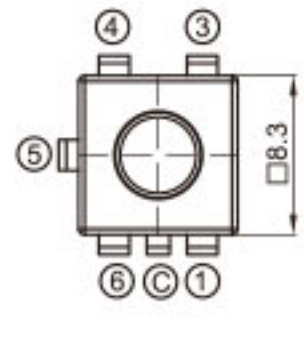 
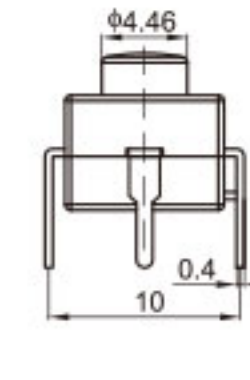 
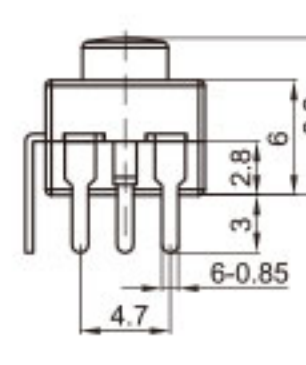 









按钮开关系列 PUSH-BUTTON SWITCH SERIES

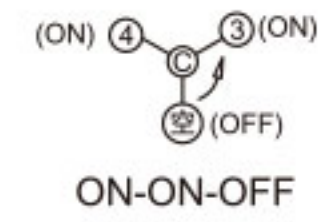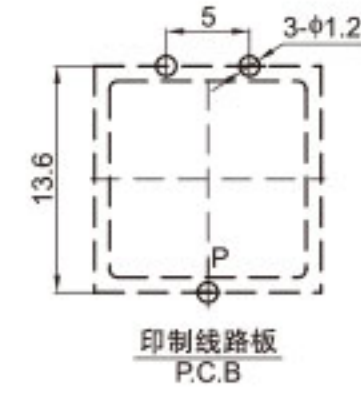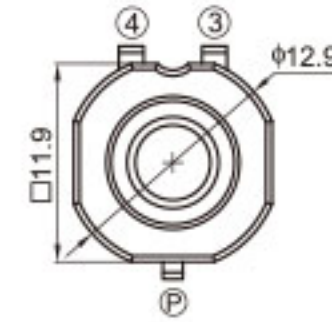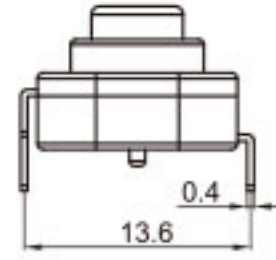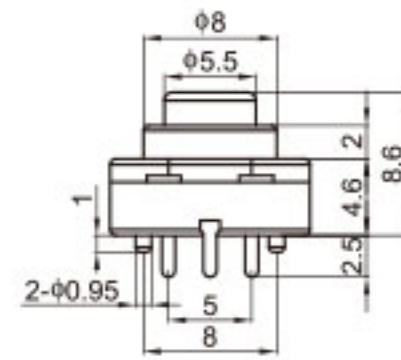     






CB1312-213BS

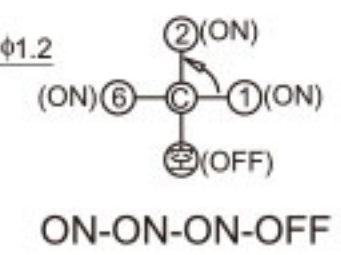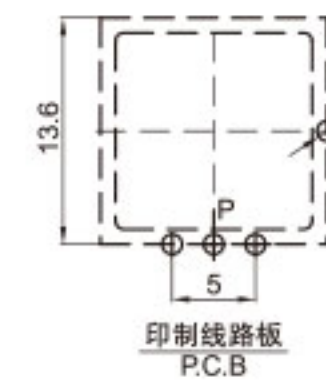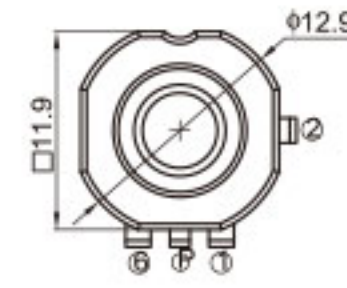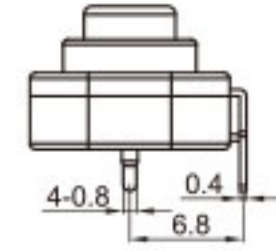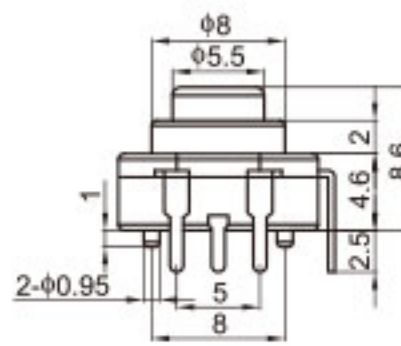     





CB1312-314H

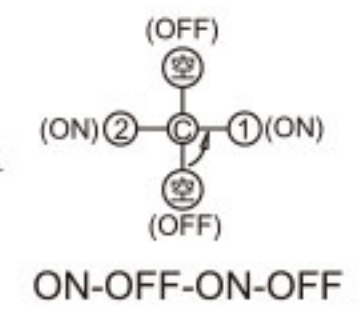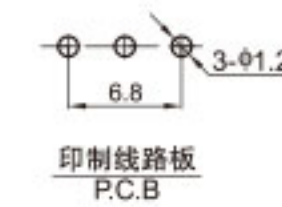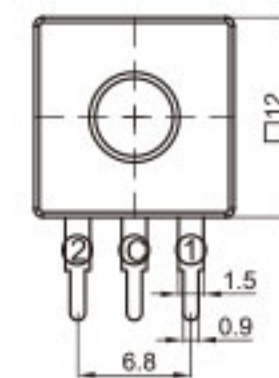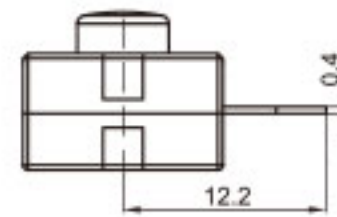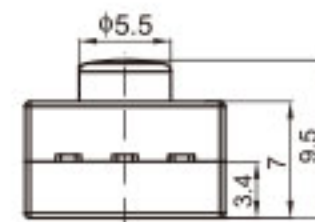     

1212-223DH 直脚

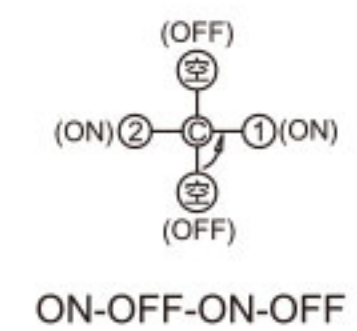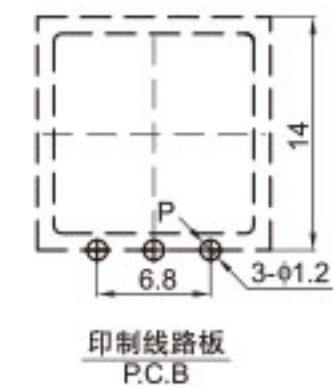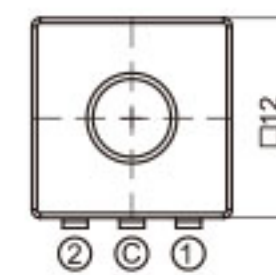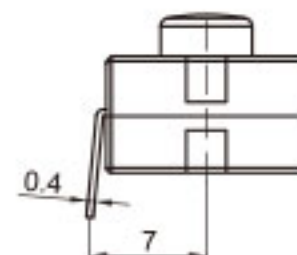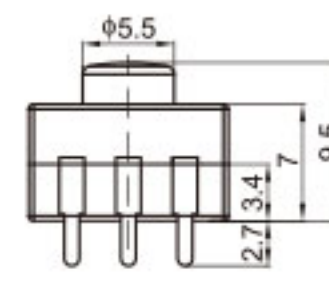     

1212-223DH

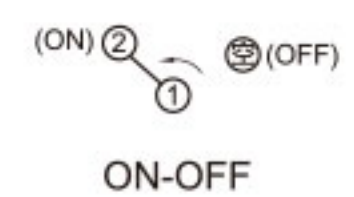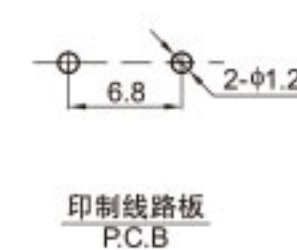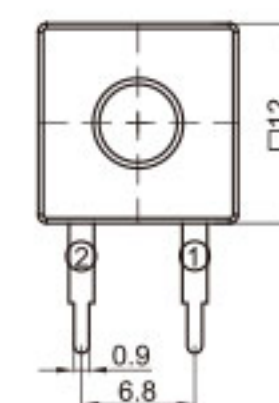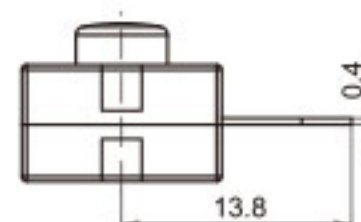    

1212-112DB 直脚

 
 
 
 
090

按钮开关系列
PUSH-BUTTON SWITCH SERIES

按钮开关系列 PUSH-BUTTON SWITCH SERIES



1212-112DB


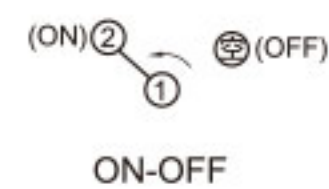
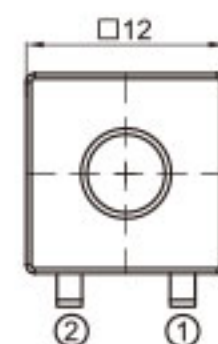
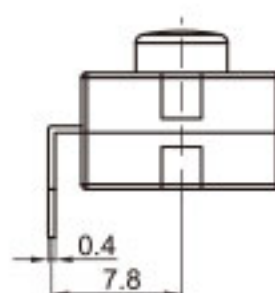
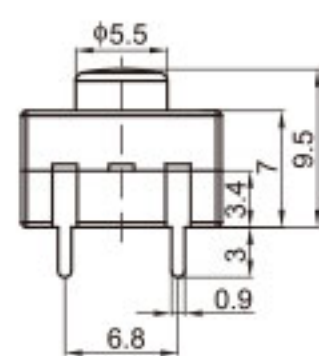


091





PUSH-BUTTON SWITCH SERIES
按钮开关系列



  
 
 
 
1212-112DBA

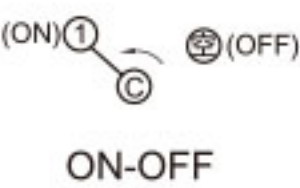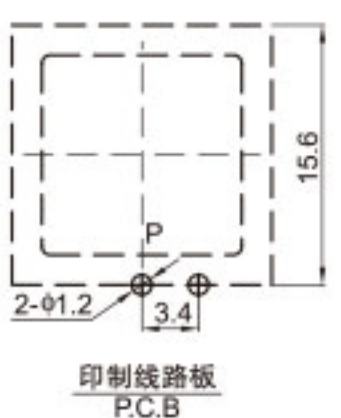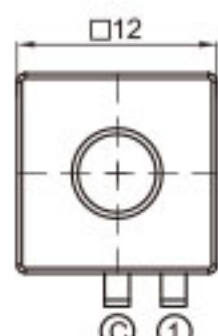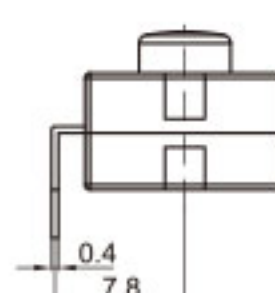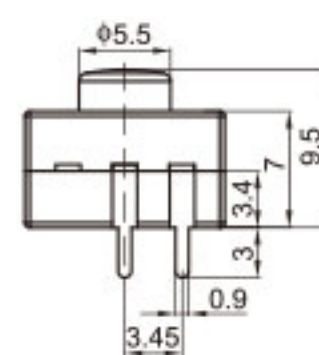

1212-112DBF

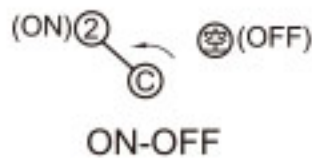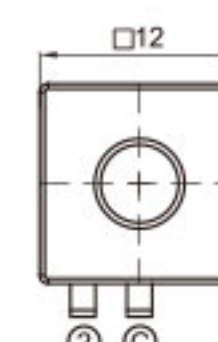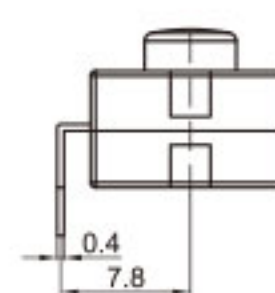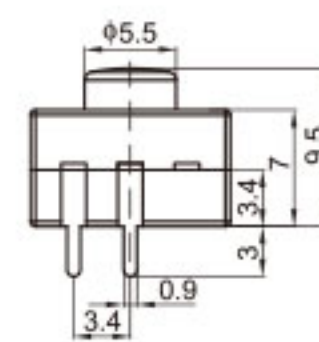    






1212-223DB 直脚

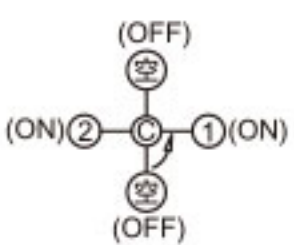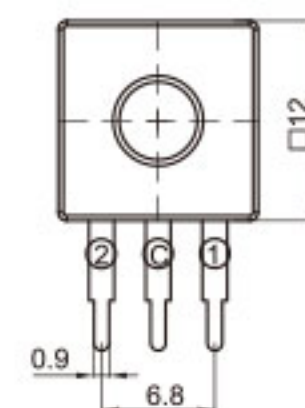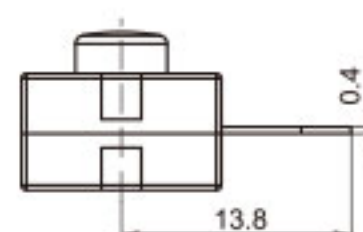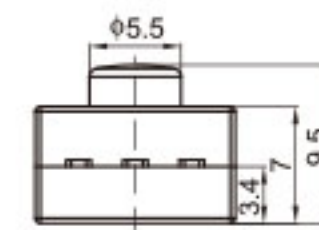    

ON-OFF-ON-OFF



     1212-223DB

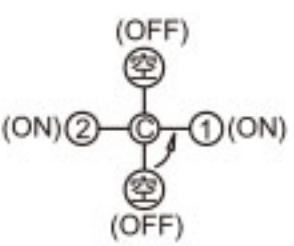
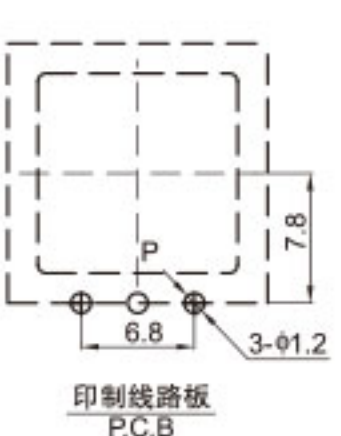
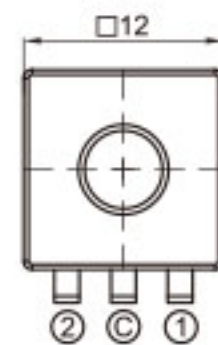
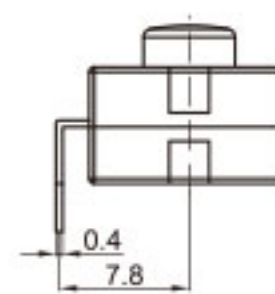
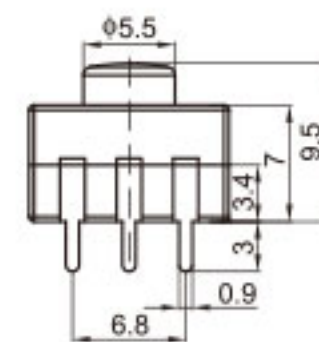


ON-OFF-ON-OFF






按钮开关系列 PUSH-BUTTON SWITCH SERIES



  
 
 
 
1212-223BR

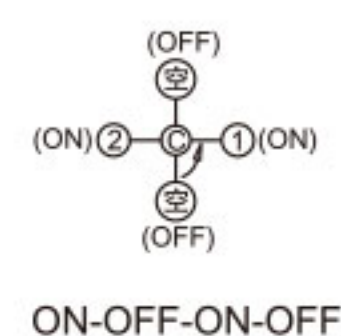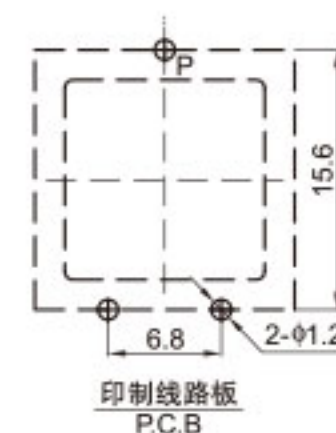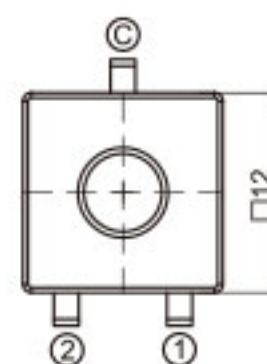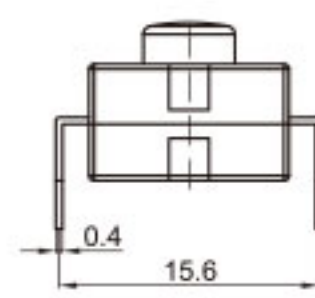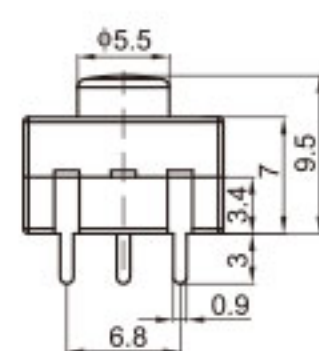






1212-112A

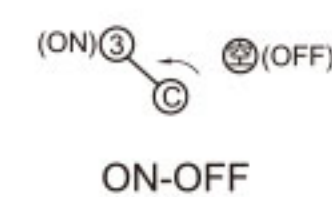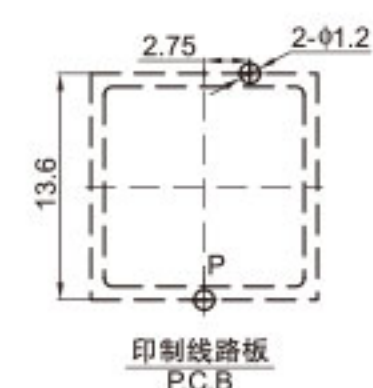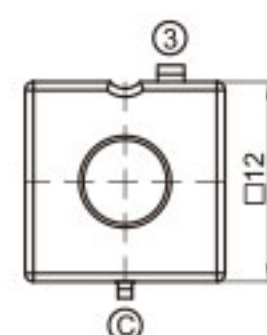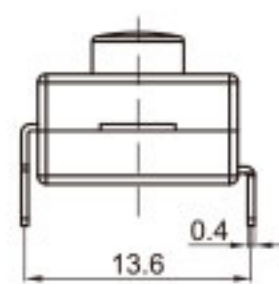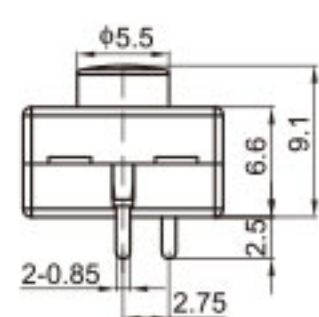     






1212-112A 长脚

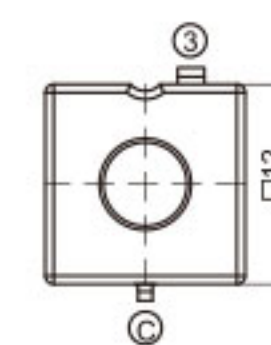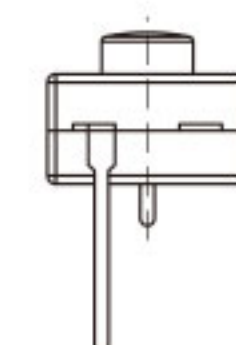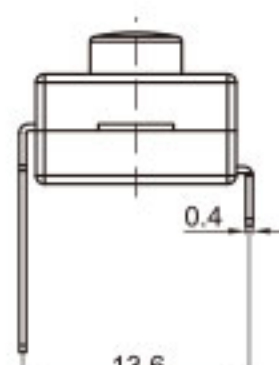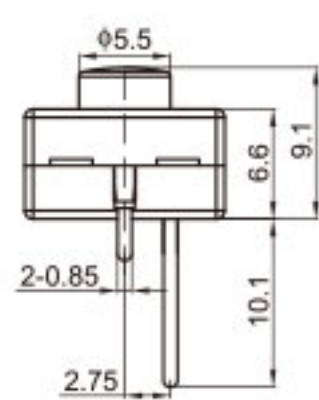    






1212-112B

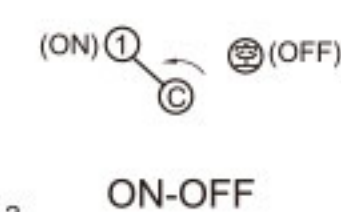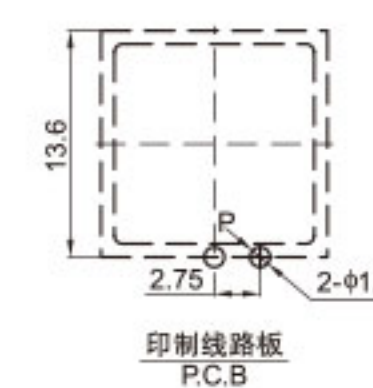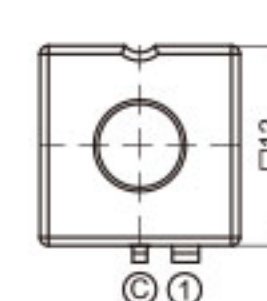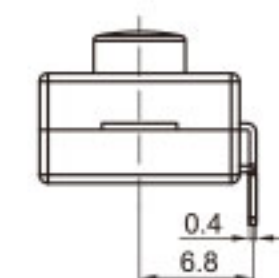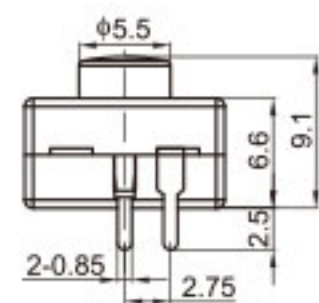     






1212-112C

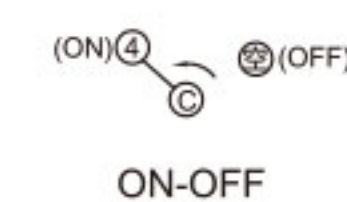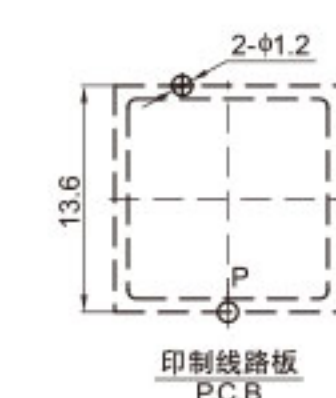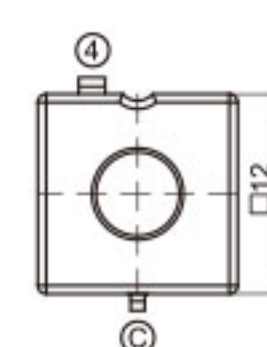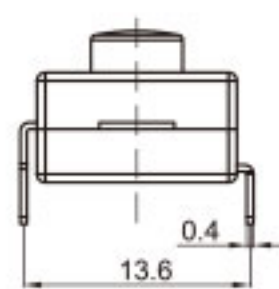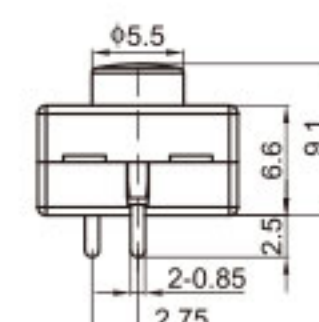     






按钮开关系列 PUSH-BUTTON SWITCH SERIES

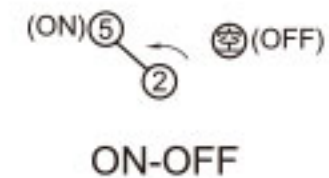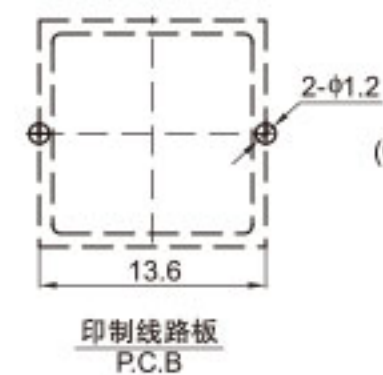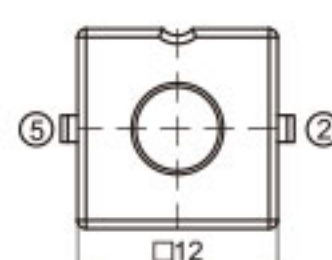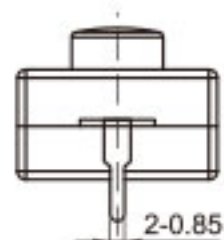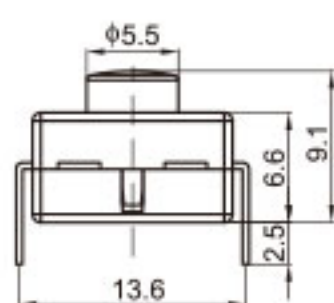     






1212-112D

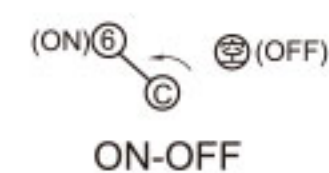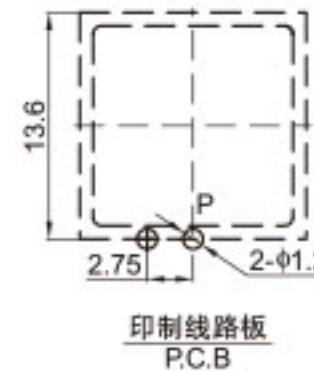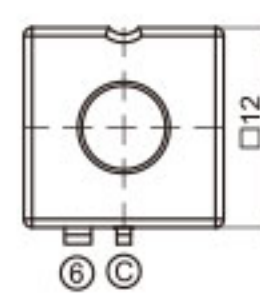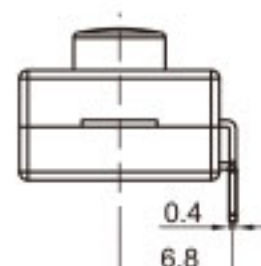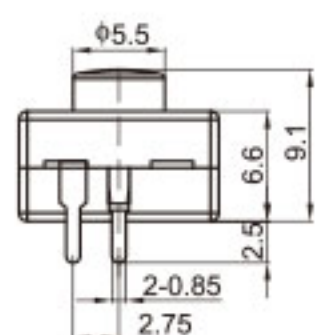     






1212-112F

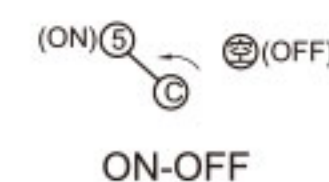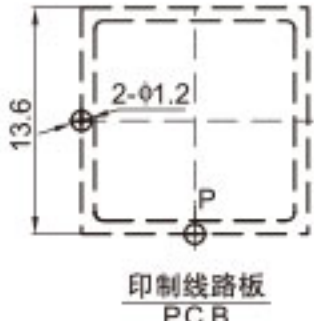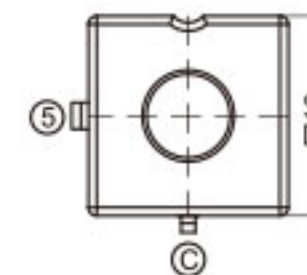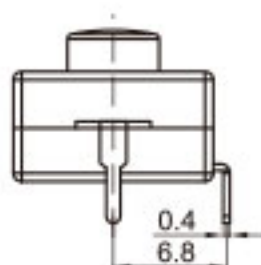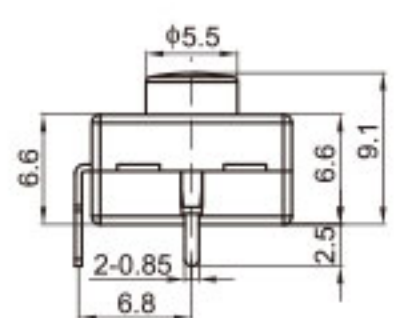     

1212-112G

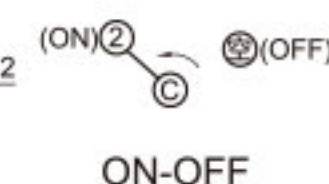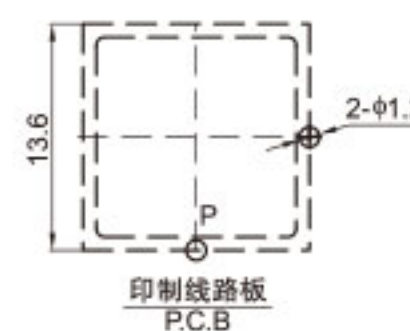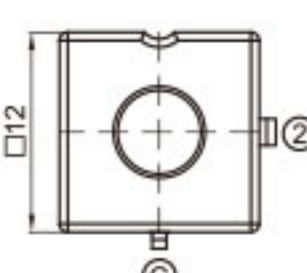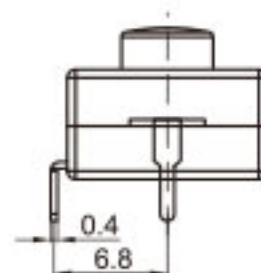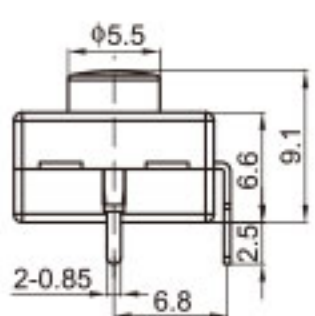     

1212-112H

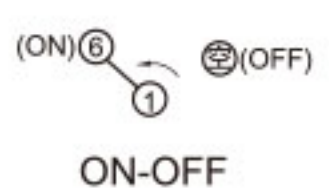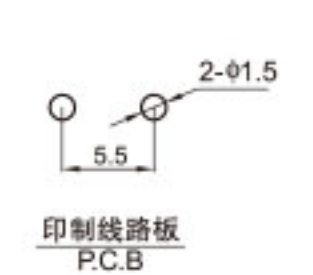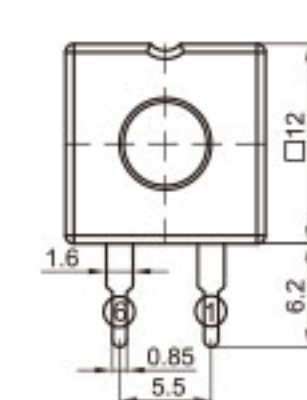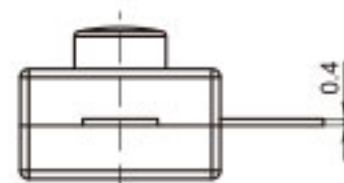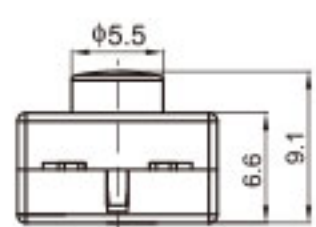     





1212-112WD



按钮开关系列 PUSH-BUTTON SWITCH SERIES



  
 
 
1212-112YB

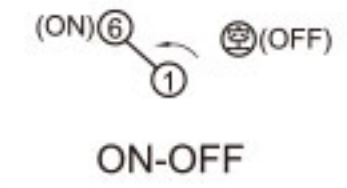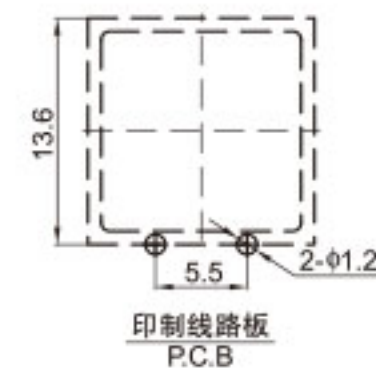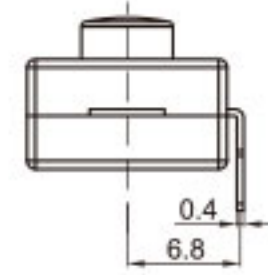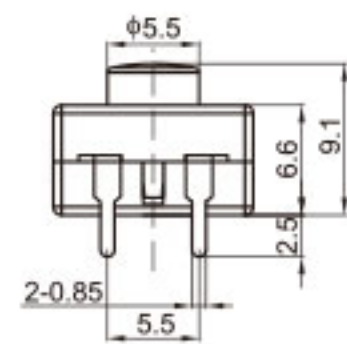

ON-OFF



   1212-112YB(无锁)

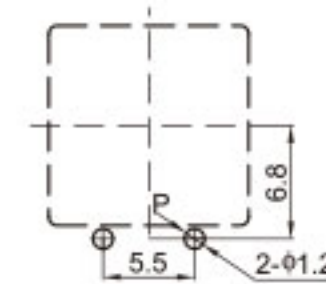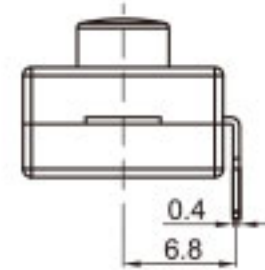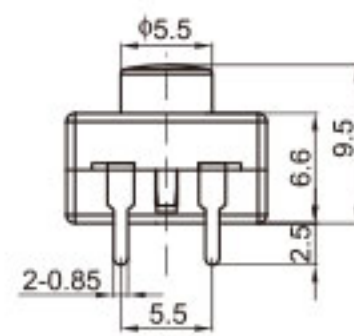





无锁(常闭.按通)



电路简图



 
 
 
 
1212-112W

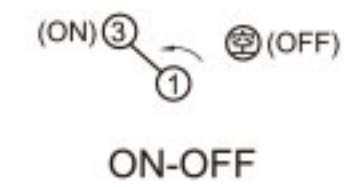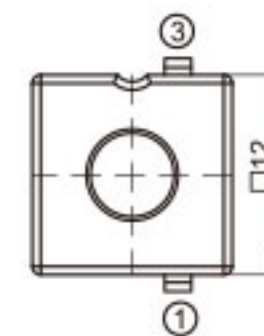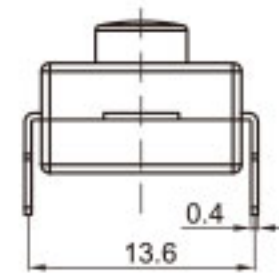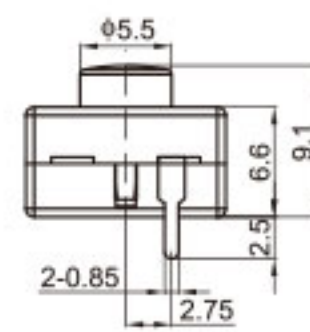

ON-OFF



 
 
 
 
1212-213BSL

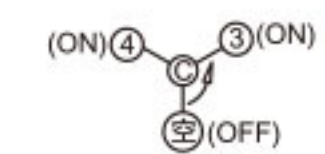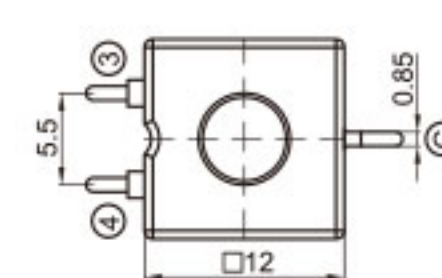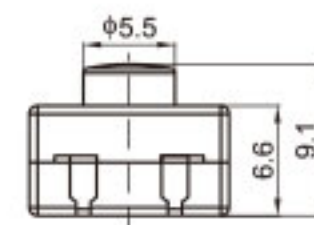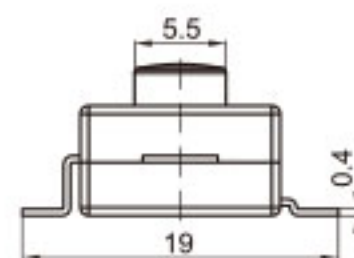

ON-ON-OFF



    1212-213WD

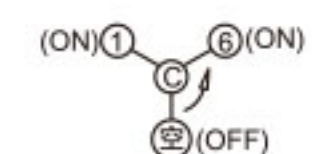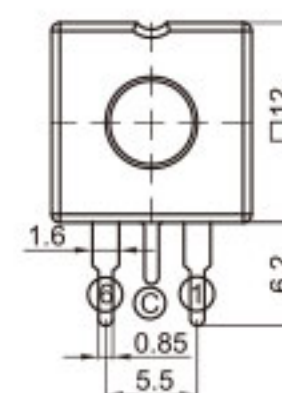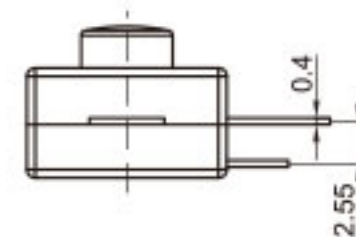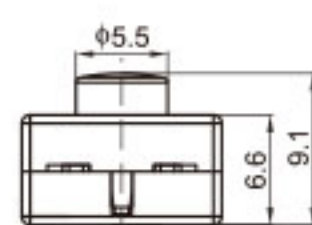

ON-ON-OFF

 
 
 
 
094

按钮开关系列
PUSH-BUTTON SWITCH SERIES

按钮开关系列 PUSH-BUTTON SWITCH SERIES






1212-213WD 短脚

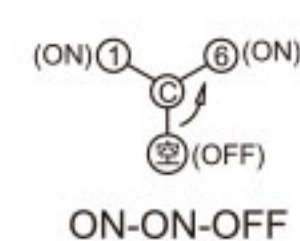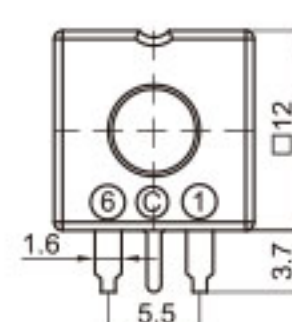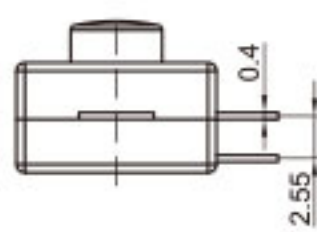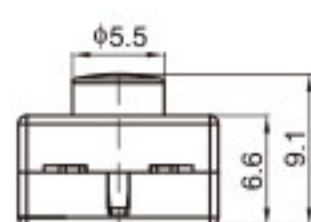

ON-ON-OFF





 
 
 
1212-112WD 短脚

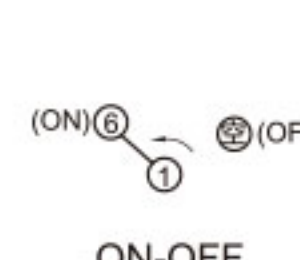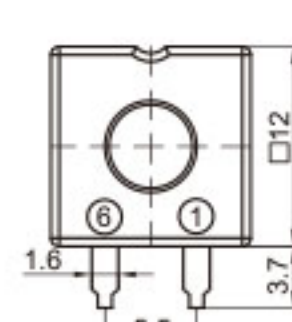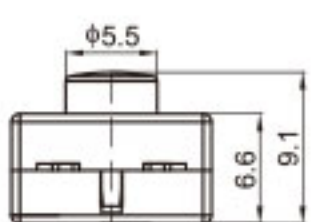

ON-OFF



  
 
 
 
1212-213YB

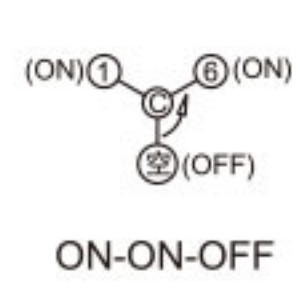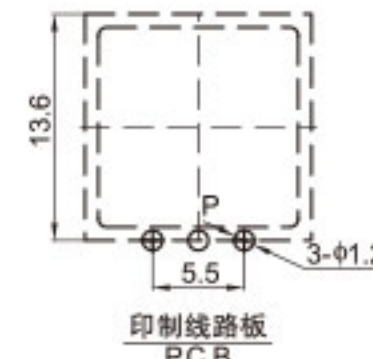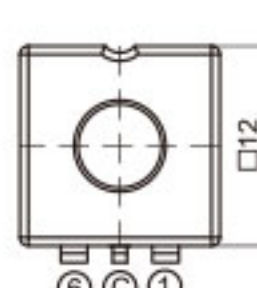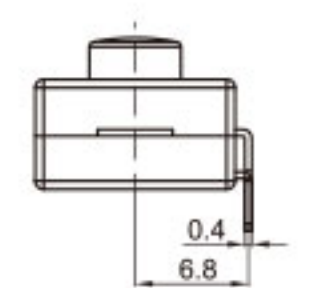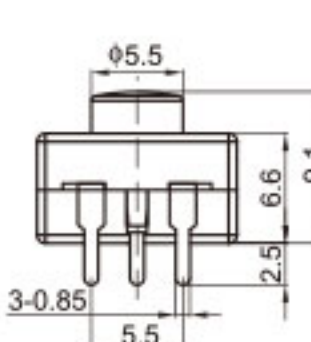

ON-ON-OFF



 
 
 
 
1212-213BSK

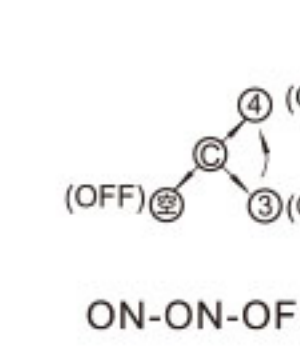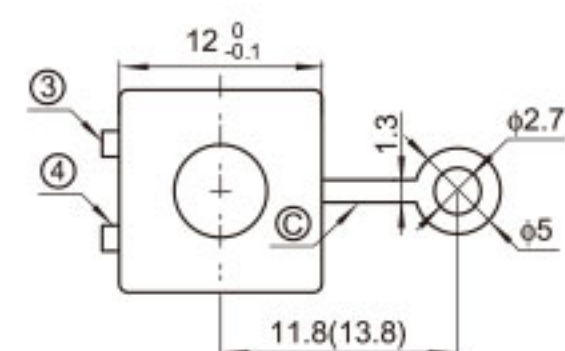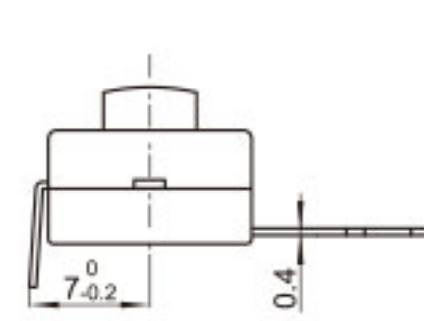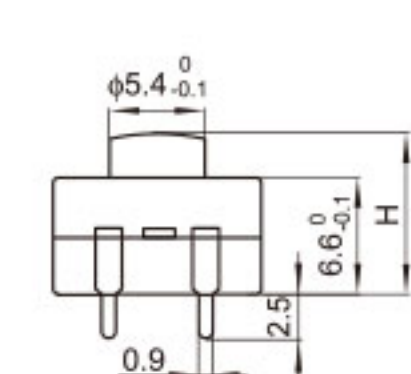

ON-ON-OFF



    1212-213A


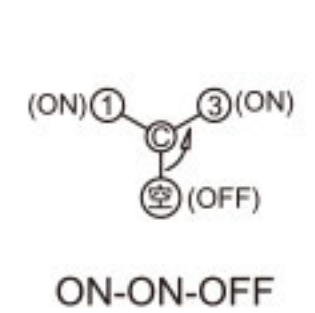
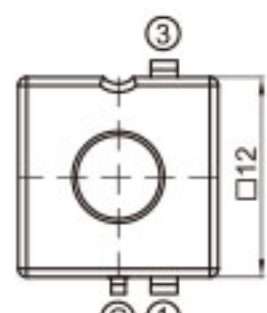
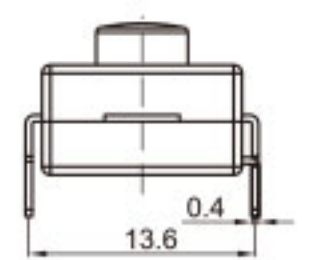
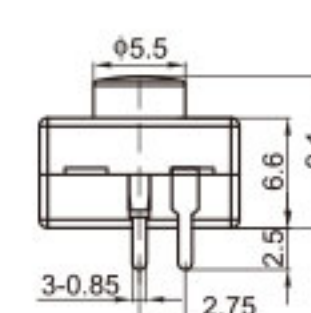


ON-ON-OFF






按钮开关系列 PUSH-BUTTON SWITCH SERIES



 
 
 
 
 
1212-23A

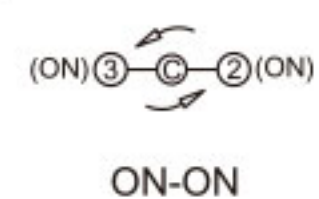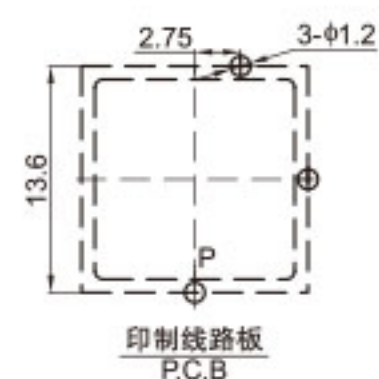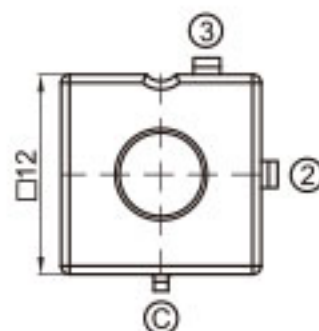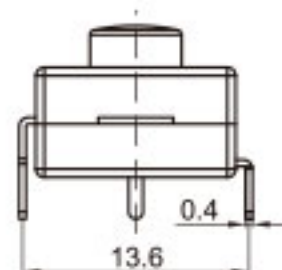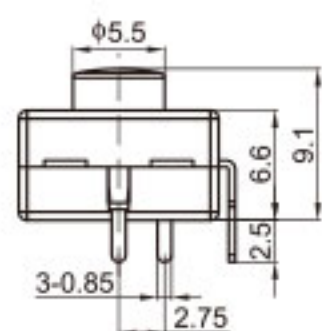






1212-213F

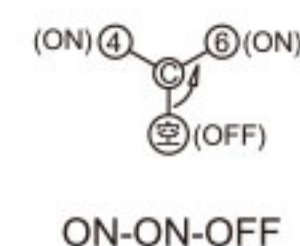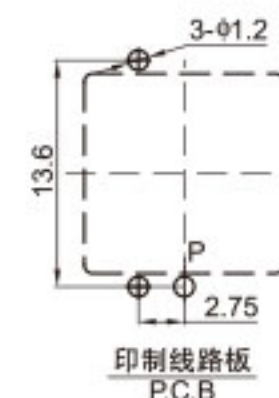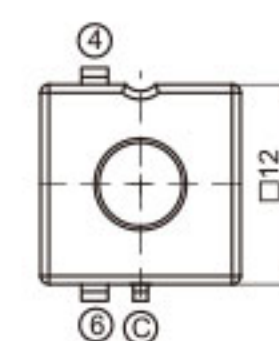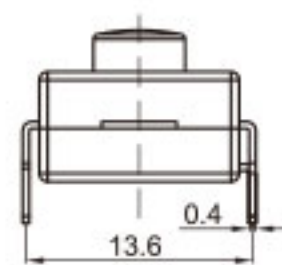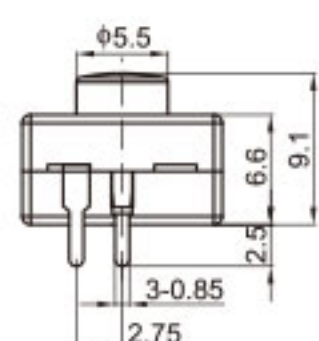     






1212-214F

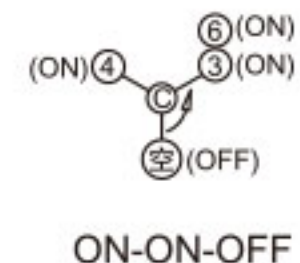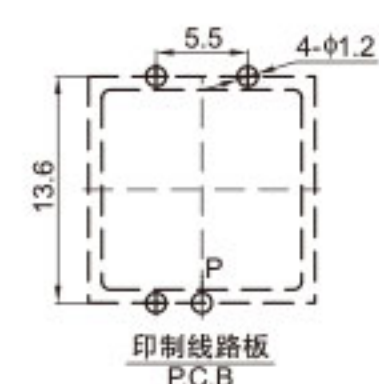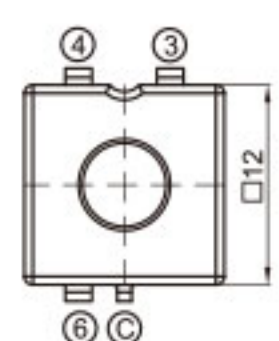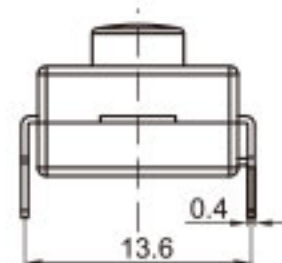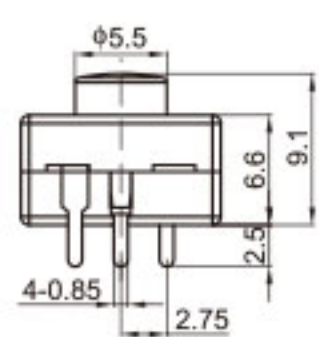     

1212-214A

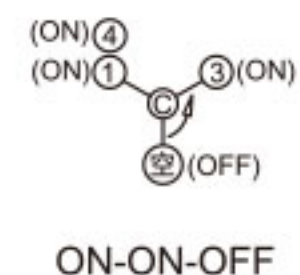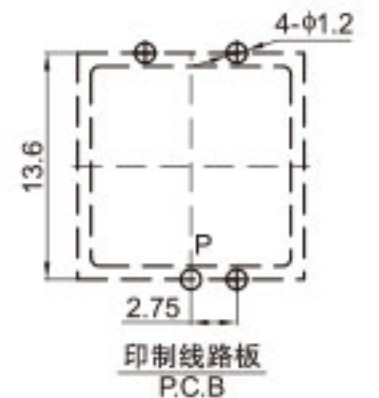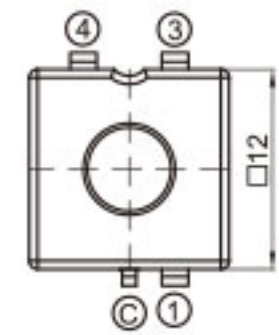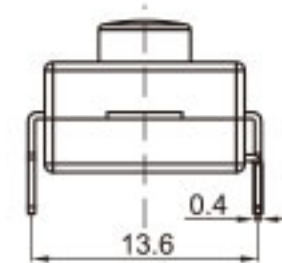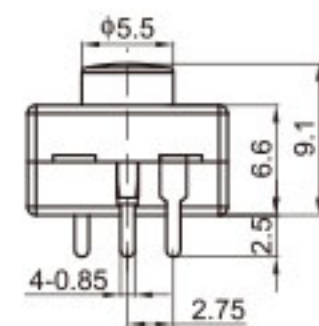     


1212-215A

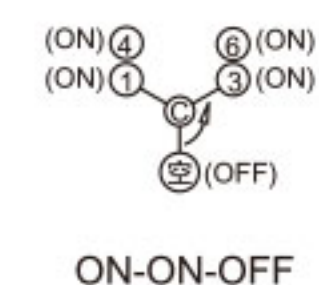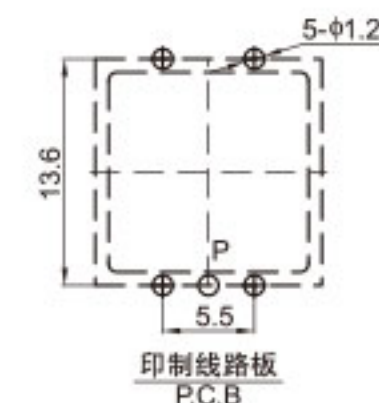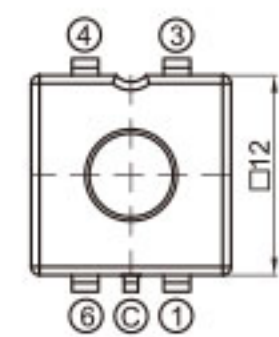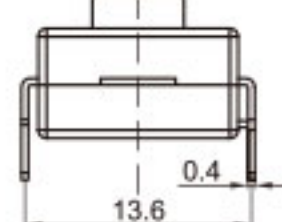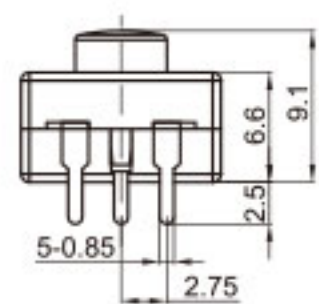     


按钮开关系列 PUSH-BUTTON SWITCH SERIES



 
1212-204WG

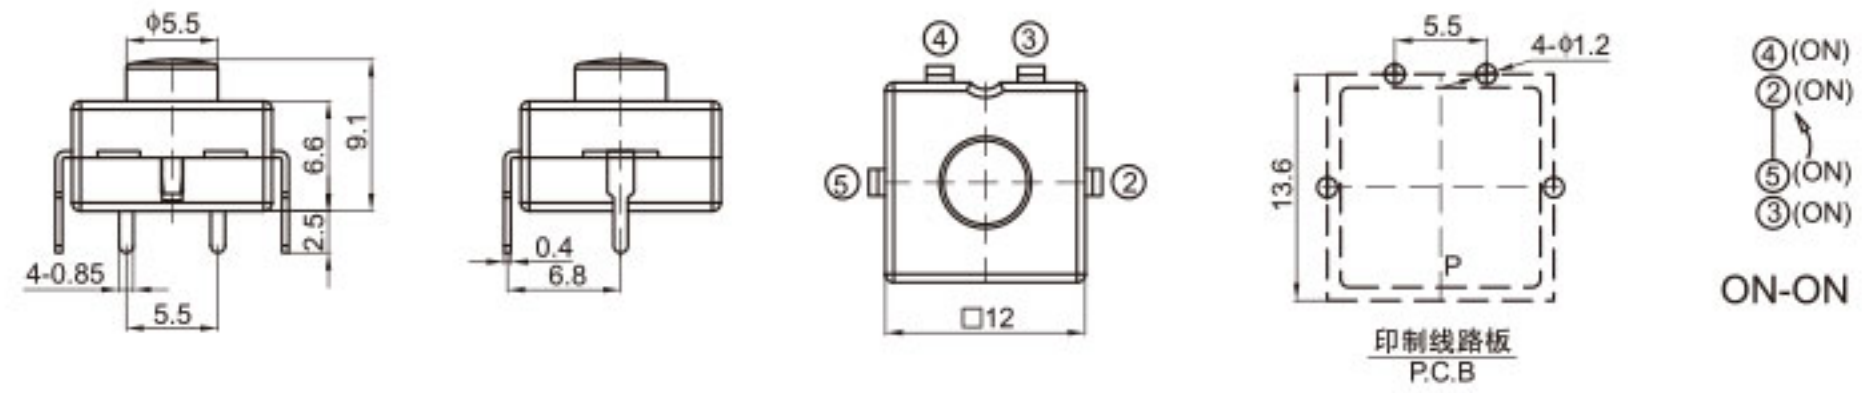


1212-214C

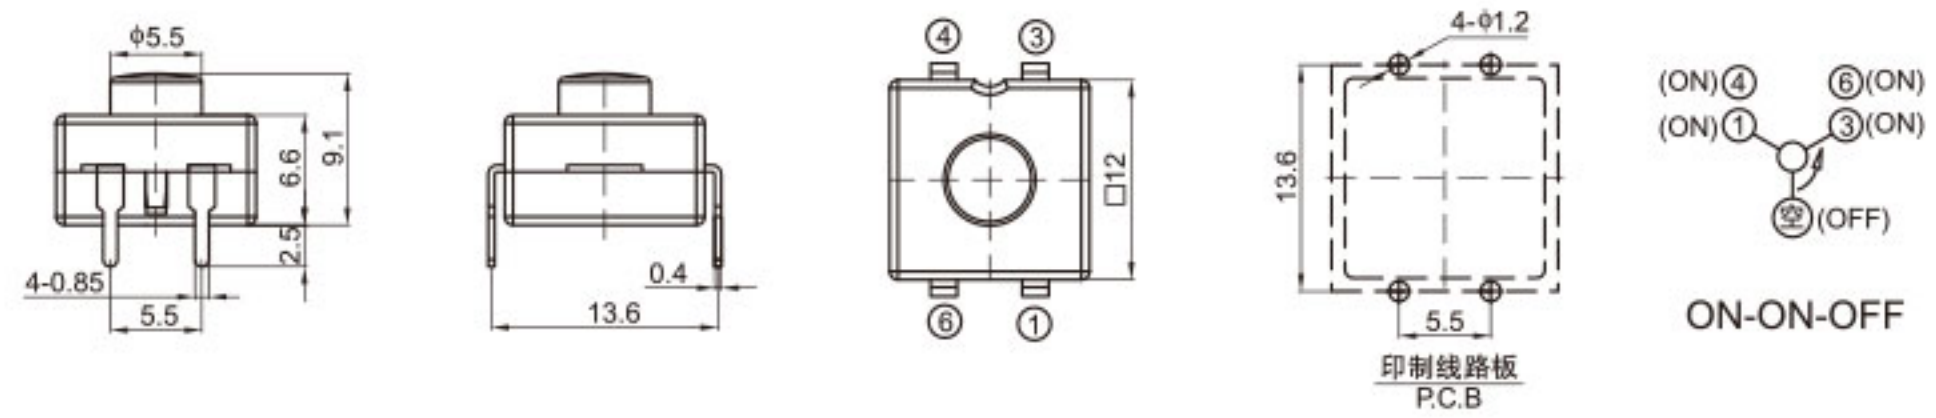 


1212-114C
1212-224C

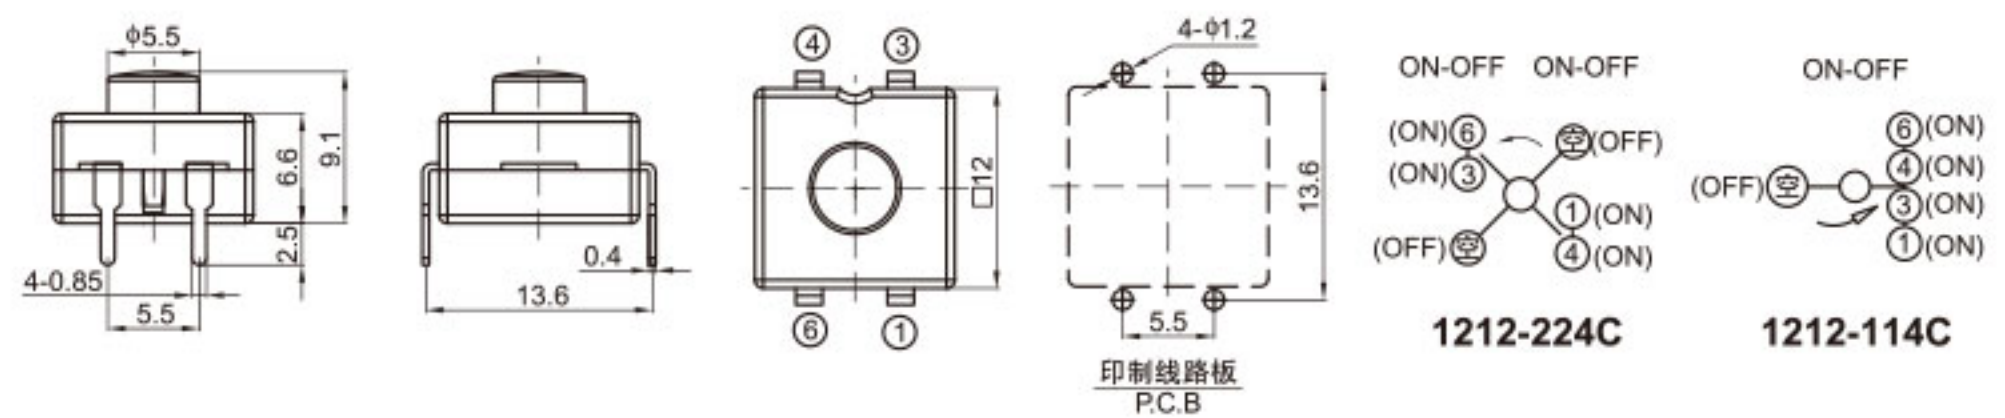 

1212-223BS
1212-113BS

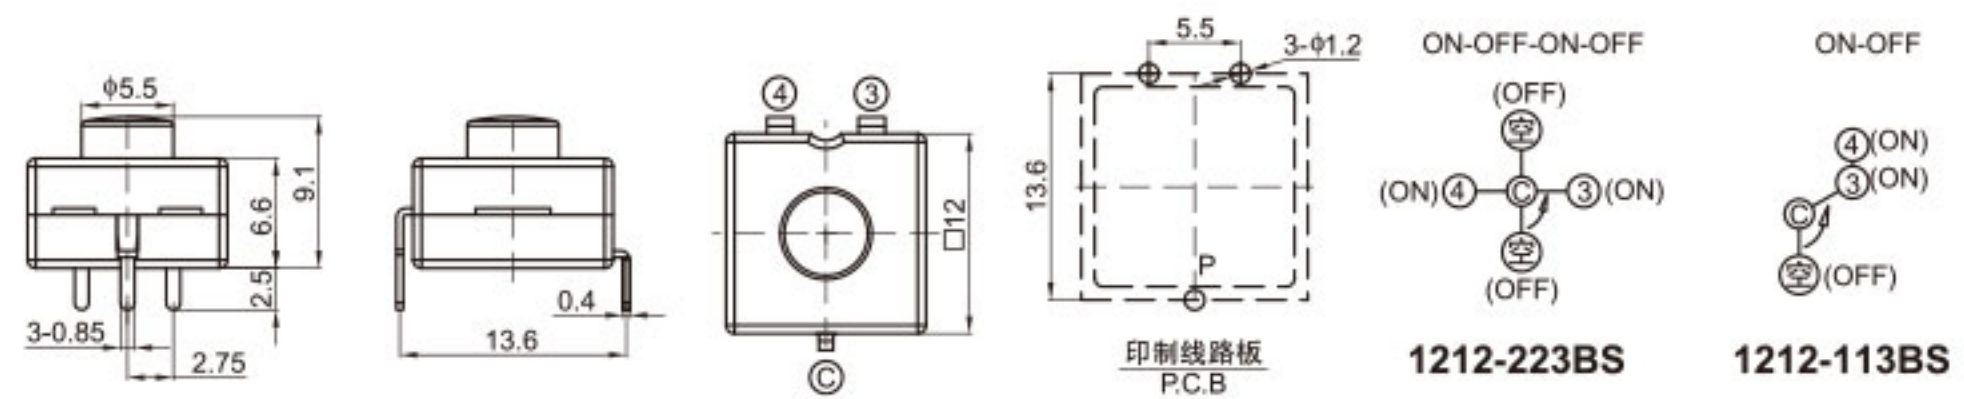 






1212-213BS
1212-23WG

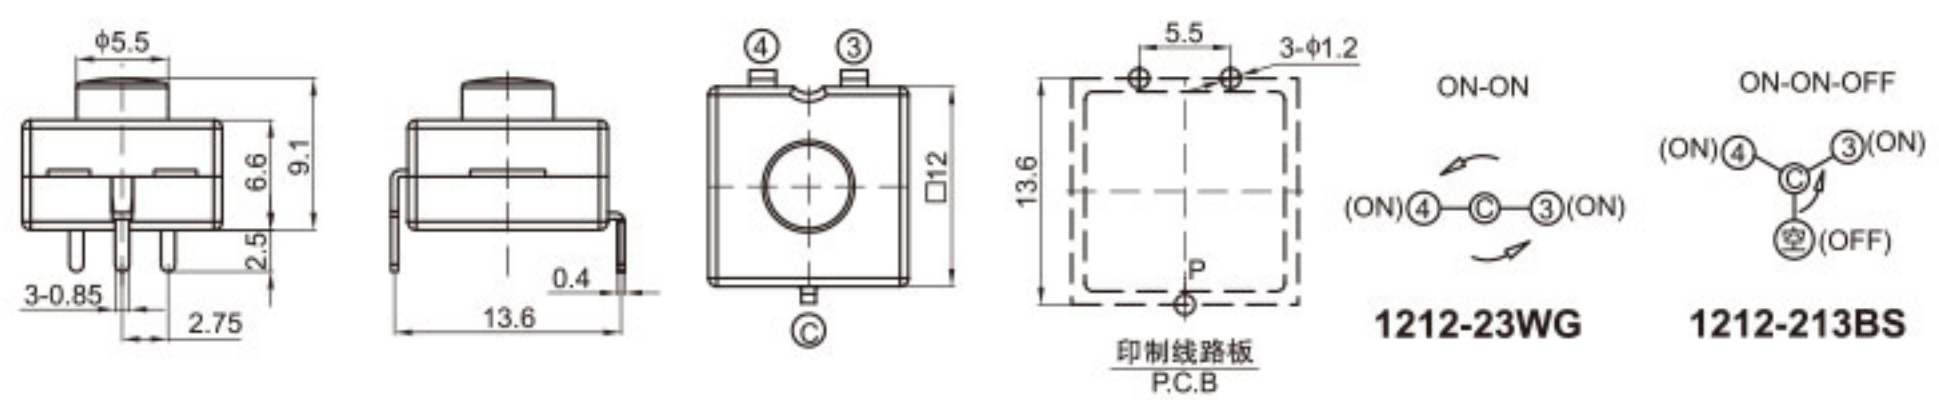 

按钮开关系列 PUSH-BUTTON SWITCH SERIES



 
 
 
 
 
1212-627

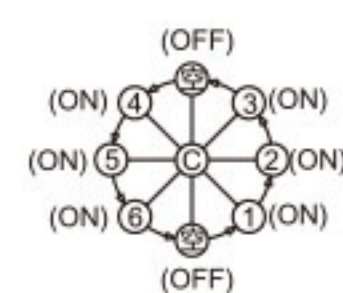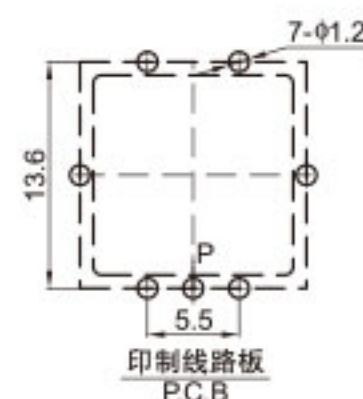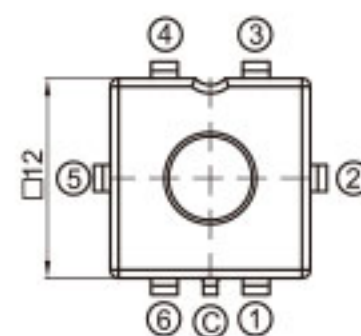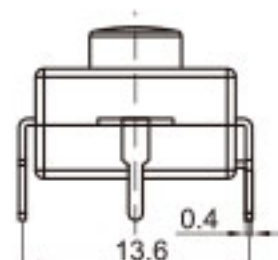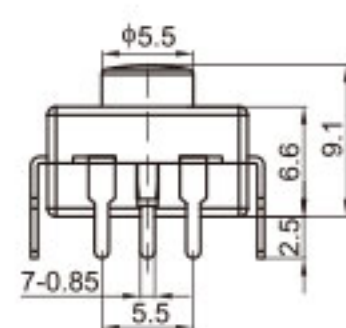

ON-ON-ON-OFF-ON-ON-ON-OFF



 
 
 
 
 
1212-67

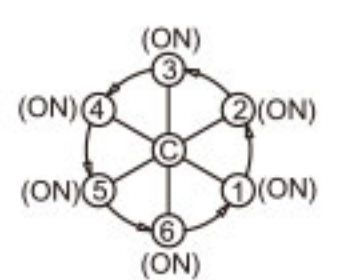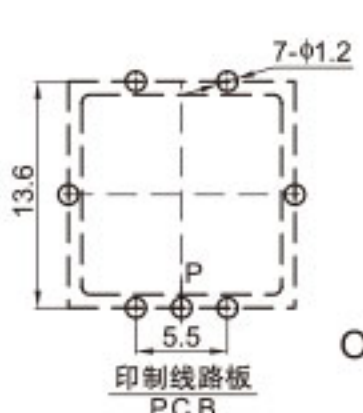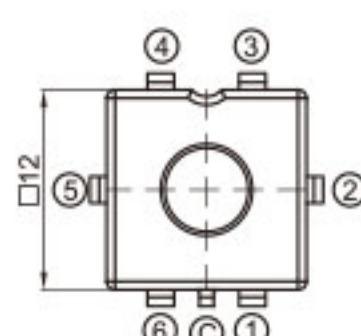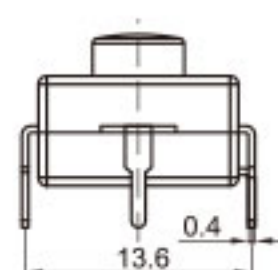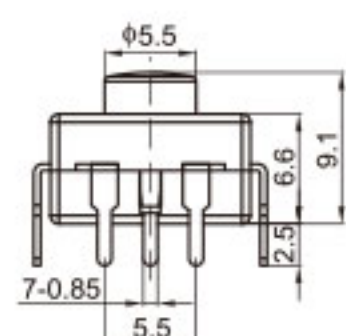

ON-ON-ON-ON-ON-ON



 
 
 
 
 
CB1212-112A

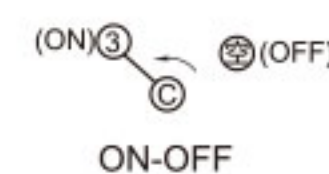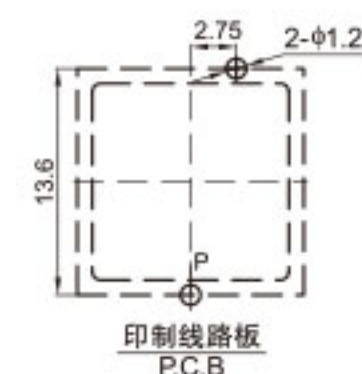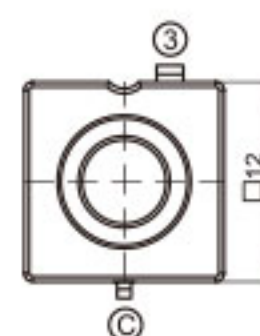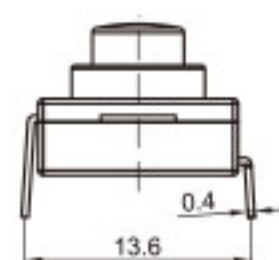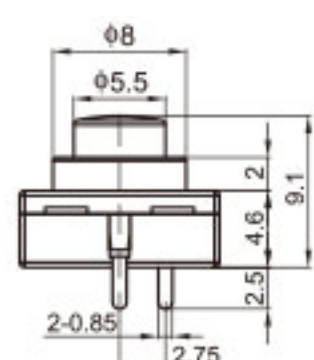

ON-OFF



  
 
 
 
CB1212-112B

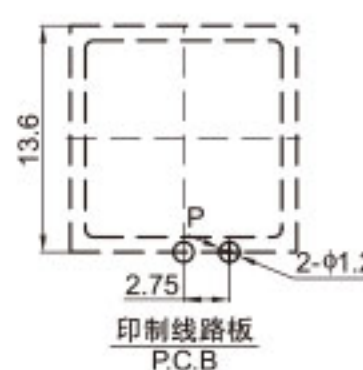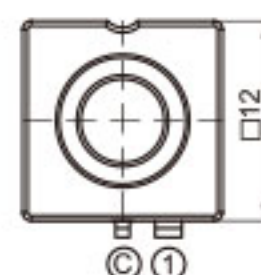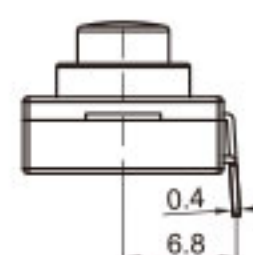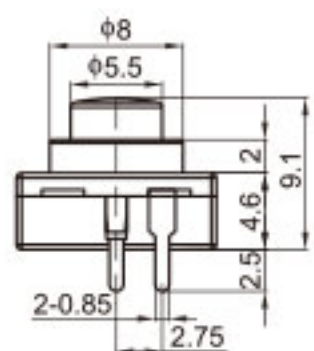

ON-OFF








    CB1212-112C


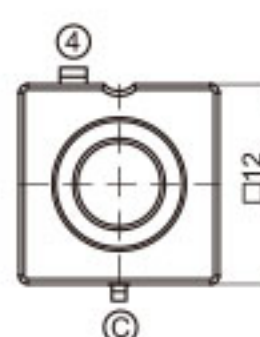
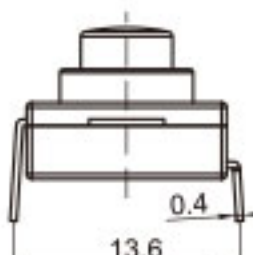
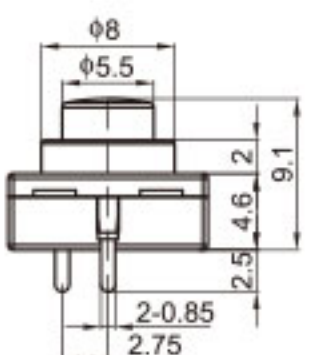


ON-OFF

 
 
 
 
 
按钮开关系列 PUSH-BUTTON SWITCH SERIES

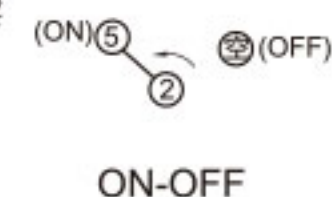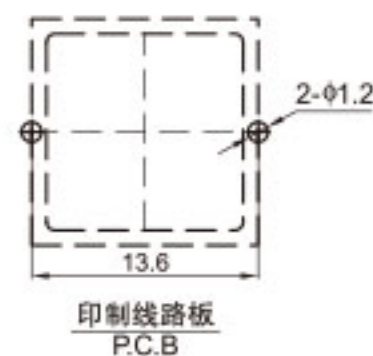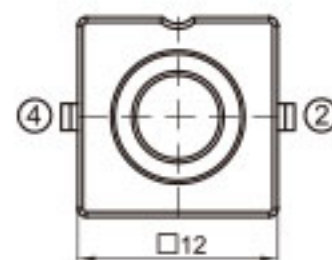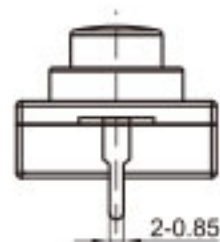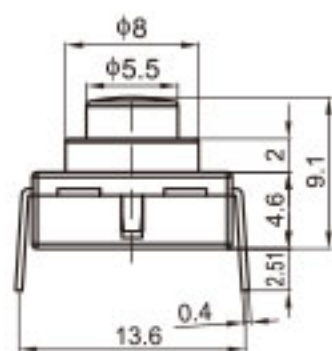






CB1212-112D

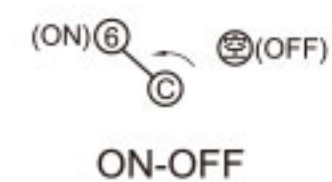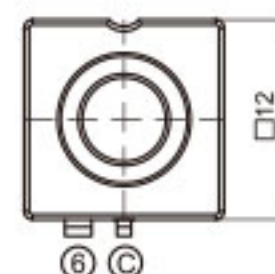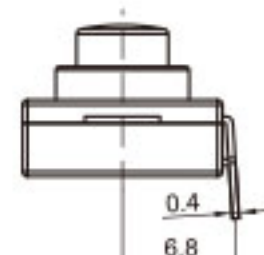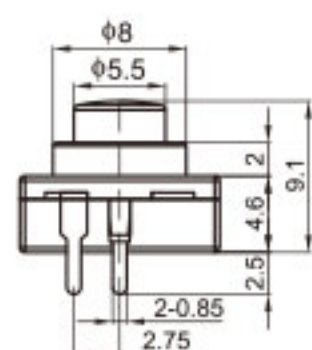    




CB1212-112F

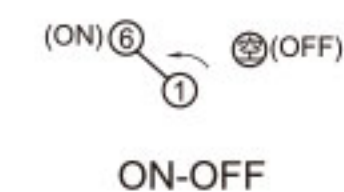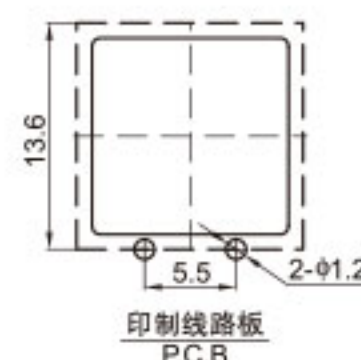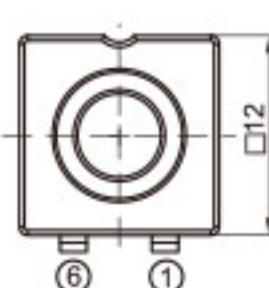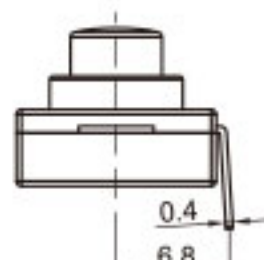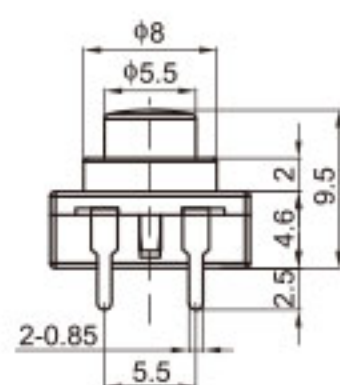     

CB1212-112YB

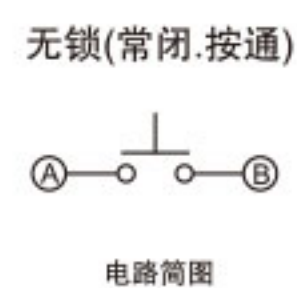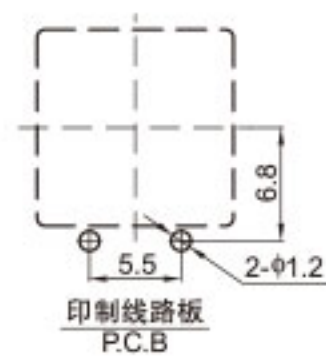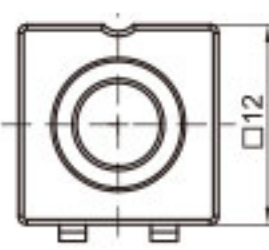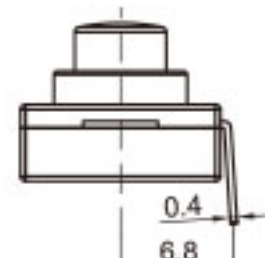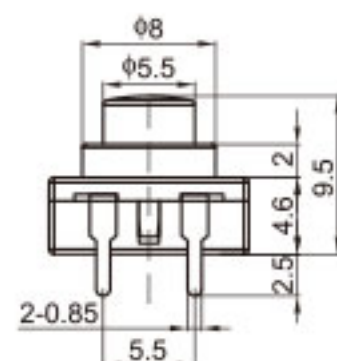     

CB1212-112YB(无锁)

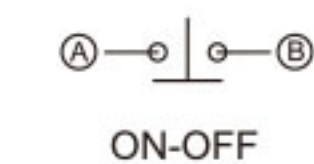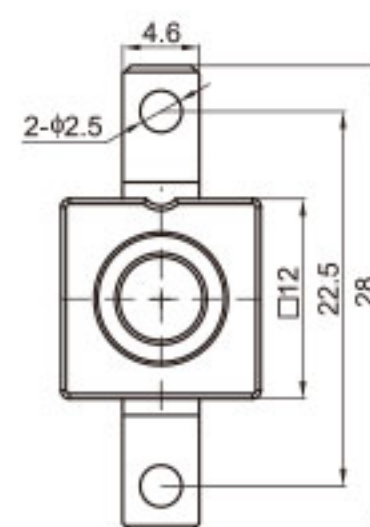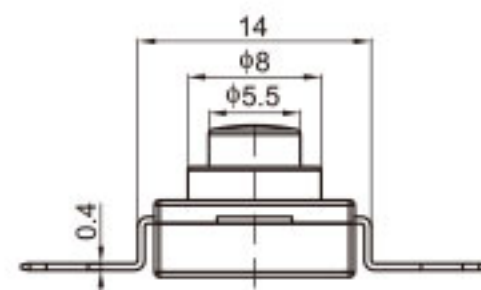   






CB1212-112KD






按钮开关系列 PUSH-BUTTON SWITCH SERIES



 
 
 
 
 
CB1212-112W

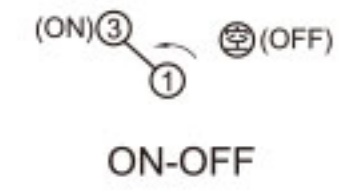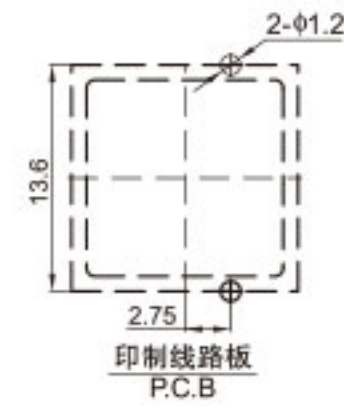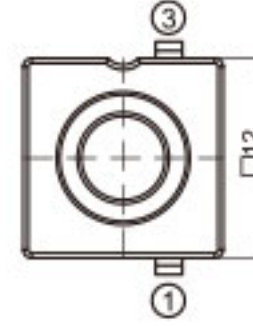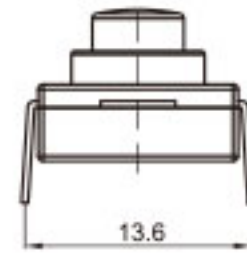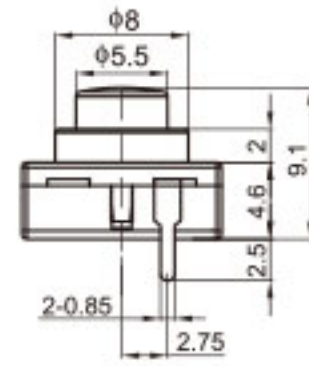


CB1212-112WD

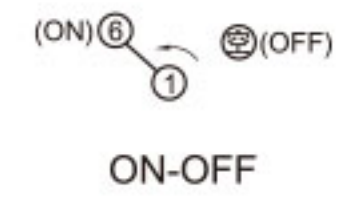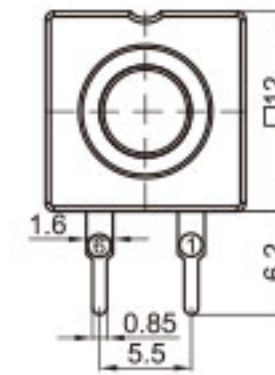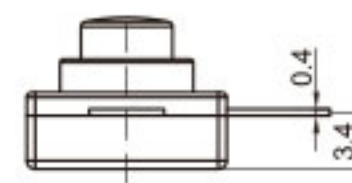   

CB1212-213BS
CB1212-223BS

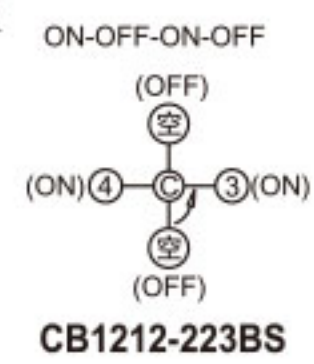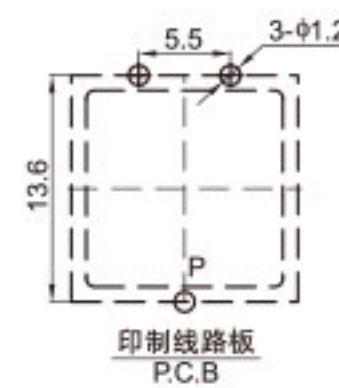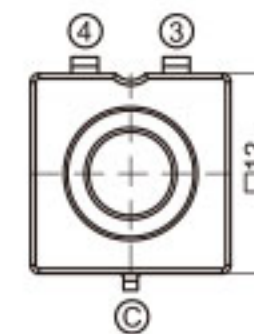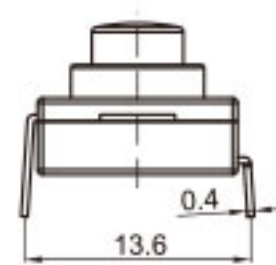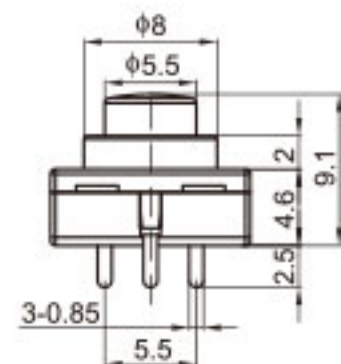     






CB1212-223BS

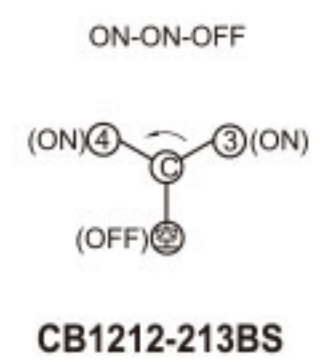 


CB1212-213BS



     CB1212-23YB
CB1212-213YB

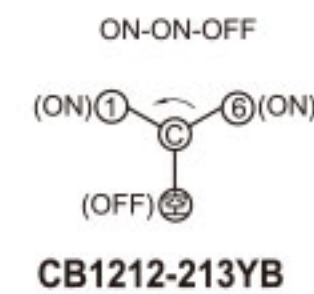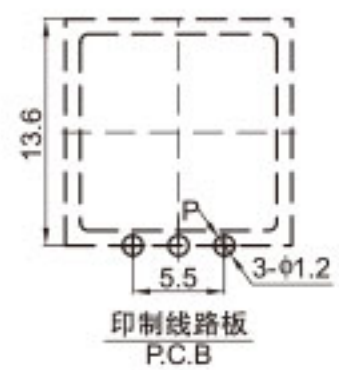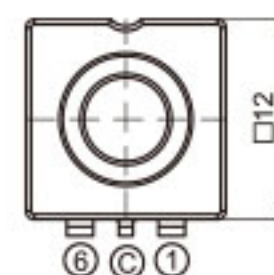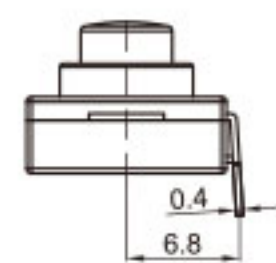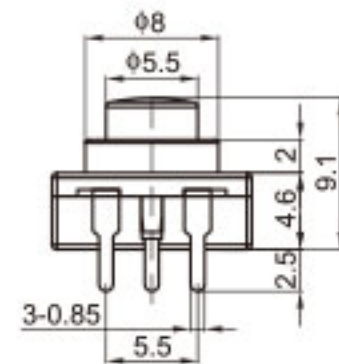






CB1212-213YB

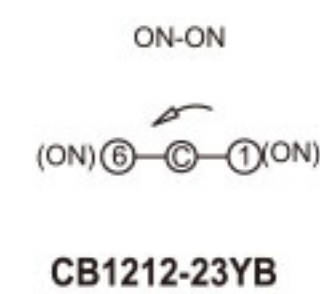 

CB1212-23YB



   
 
 
CB1212-114C

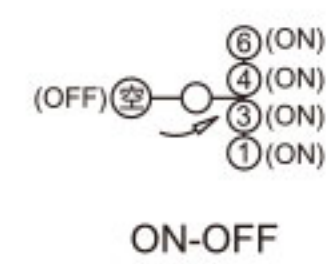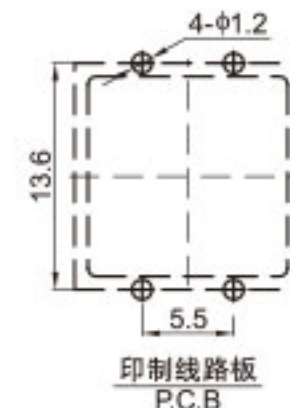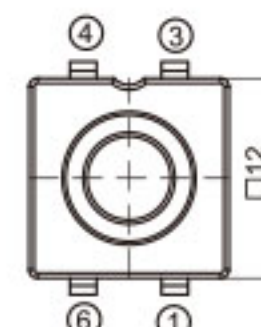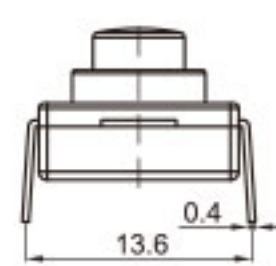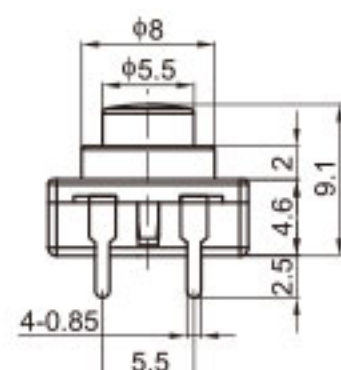





按钮开关系列
PUSH-BUTTON SWITCH SERIES



 
 
 
1208-YD

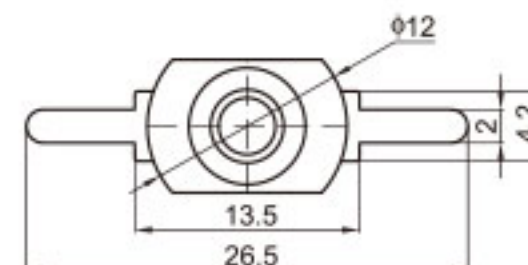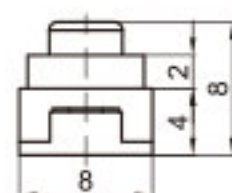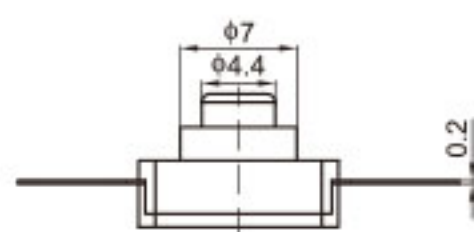




1208-YD(无锁)

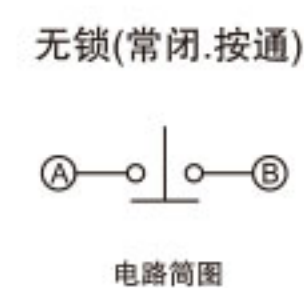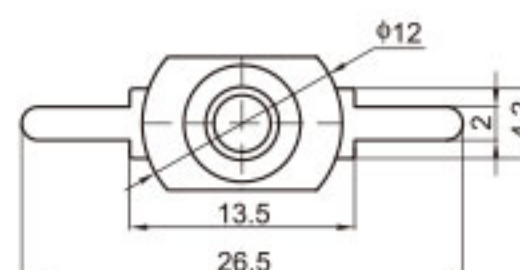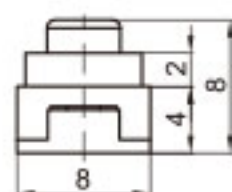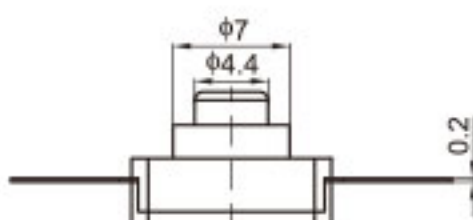    



1208-YD 折弯

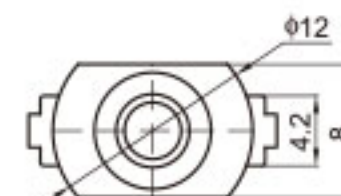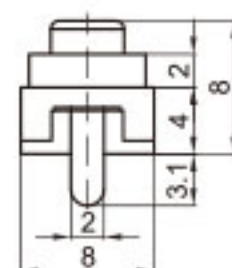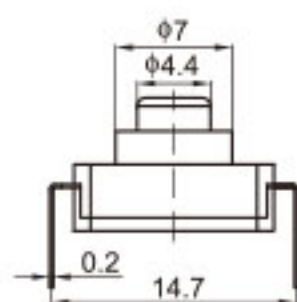   

1208-YD 折弯 (无锁)


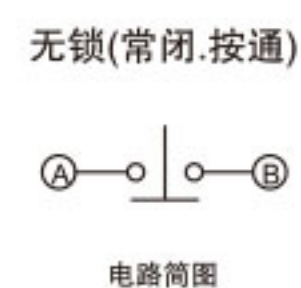 
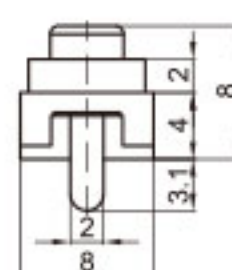 
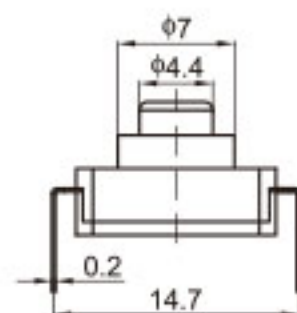 


1208-YD 反折弯


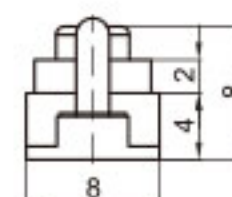 
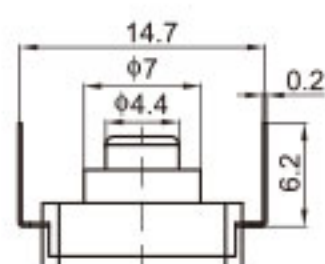 








按钮开关系列 PUSH-BUTTON SWITCH SERIES

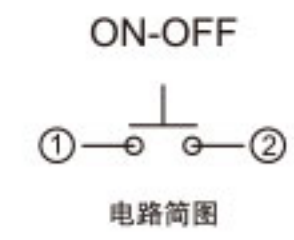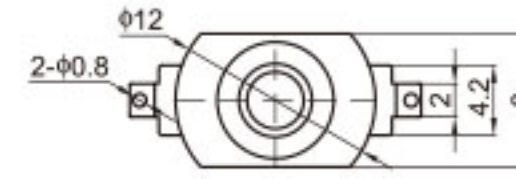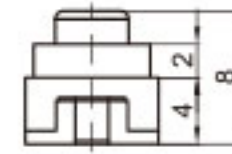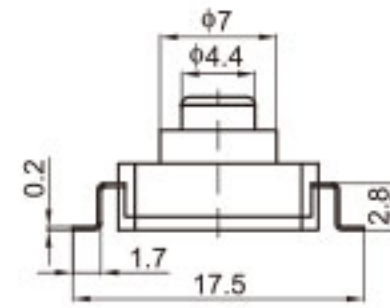    




1208-YDL

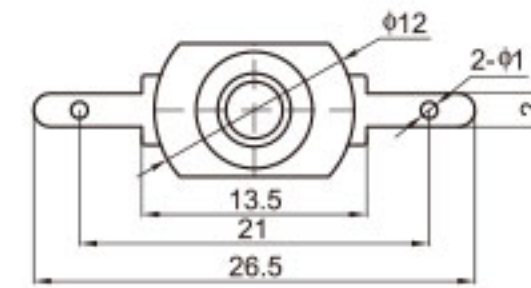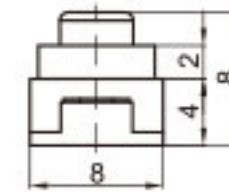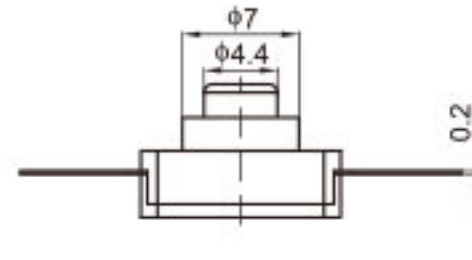   




1208-YD 带孔

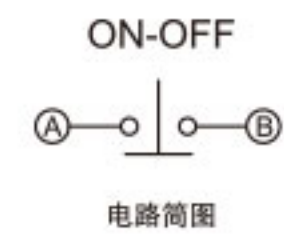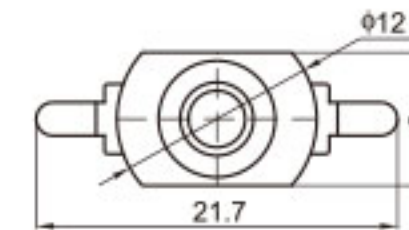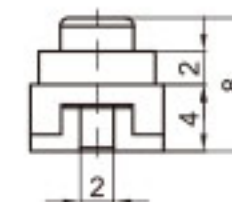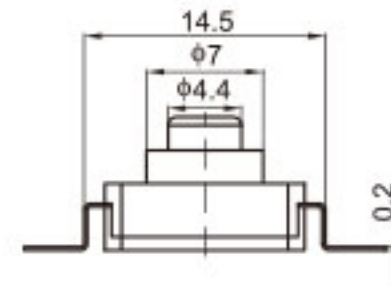    

1208-YDL

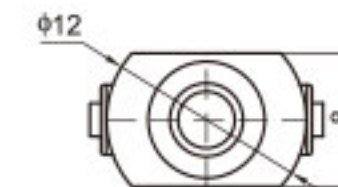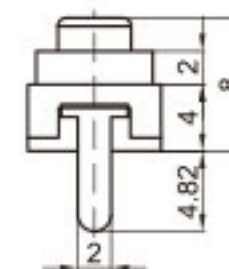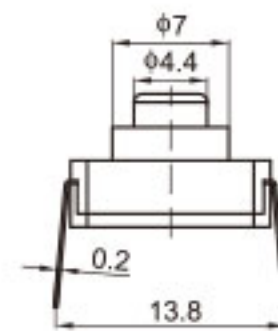   

1208-YD 贴片弯

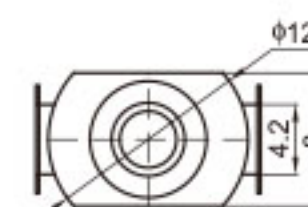 
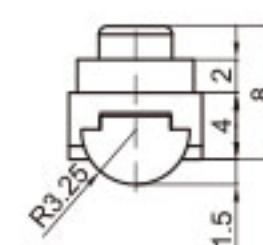 
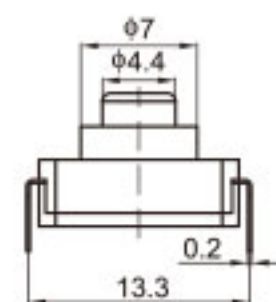 


1208-G





按钮开关系列
PUSH-BUTTON SWITCH SERIES



 
 
 
1208-CC

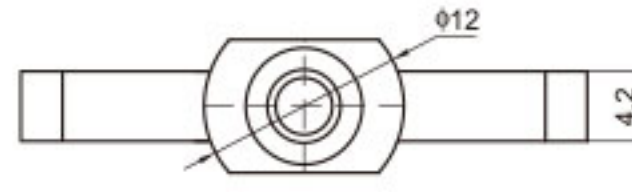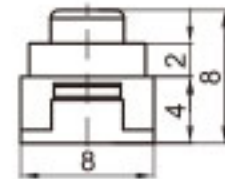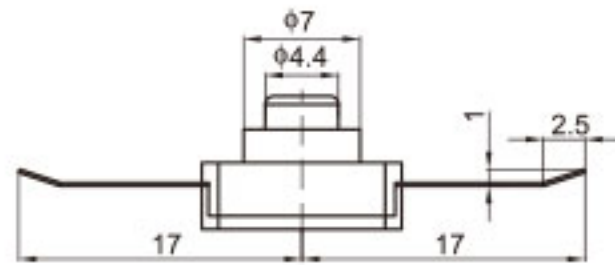

1208-CD

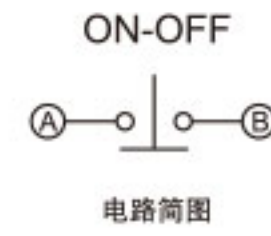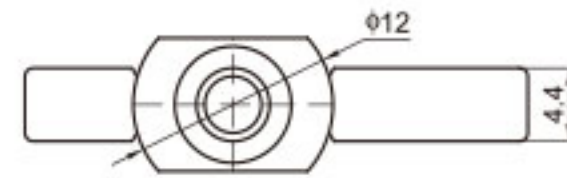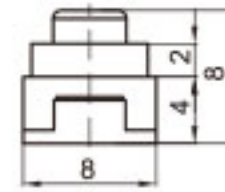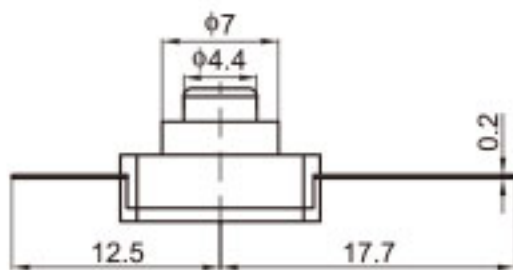    

1208-CP

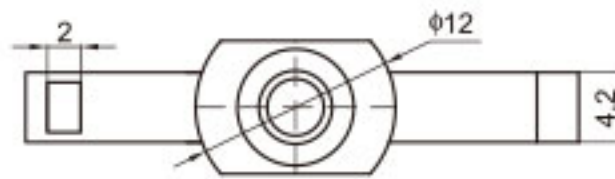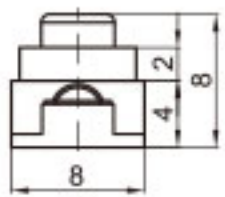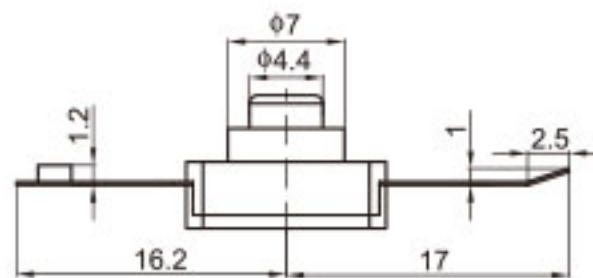   

1208-CQ

